



LIFESTYLE[®] V35/V25 HOME ENTERTAINMENT SYSTEMS


LIFESTYLE[®] T20/T10 HOME THEATER SYSTEMS


Setup Guide | Guía de instalación | Guide d'installation


SAFETY INFORMATION

Please read this guide

Please take the time to follow the instructions in this guide carefully. They will help you set up and use your system properly so you can enjoy its advanced features. Please save this guide for future reference.

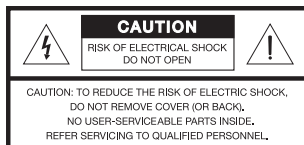

 The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

 The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in this guide.

WARNINGS:

- To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.
- Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard.
- Do not place any naked flame sources, such as lighted candles, on or near the apparatus.
- Keep the remote control battery away from children. It may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 100°C (212°F), or incinerate. Dispose of used batteries promptly. Replace only with a battery of the correct type and model number.
- Contains small parts that may be a choking hazard. Not suitable for children under age 3.



CAUTIONS:

- Make no modifications to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance, and may void the warranty.
- Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.

Notes:

- Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- The product must be used indoors. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.
- This product is intended to be used only with the power supply provided.
- The product label is located on the bottom of the product.

Additional safety information

See the additional instructions on the *Important Safety Information* sheet enclosed in the shipping carton.

Batteries



Please dispose of used batteries properly, following any local regulations. Do not incinerate.

Class B emissions

This device complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. It must not be co-located or be operating in conjunction with any other antennas or transmitters.



This product conforms to all EU Directive requirements as applicable by law. The complete Declaration of Conformity can be found at www.Bose.com/compliance.

©2010 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

Welcome


Thank you for choosing a Bose® LIFESTYLE® system for your home. This guide provides step-by-step instructions for setting up your new system. There are two phases to the setup process:

Physical setup phase: Placing the system components and connecting them together.

Interactive setup phase: Completing your setup following the interactive steps on your TV screen provided by the Unify™ intelligent integration system.

Unpacking

The parts of your new system are packaged in four numbered kits plus a small box containing the appropriate power cords:

- **1** Control console kit
- **2** Acoustimass® module kit
- **3** Speaker kit
- **4** Interactive kit
-  Power cord kit (used with kits 1 and 2)

Starting with Kit 1, unpack each kit and set up its contents before unpacking the next one.

Be sure to save all of the packing materials. These provide the safest means for any necessary shipping or transporting.

If any part appears damaged, do not attempt to use it. Notify Bose or your authorized Bose dealer immediately. For Bose contact information, refer to the address sheet included in Kit 4.

 
SYSTEM SETUP

1


Control console kit

What you need for the following steps:


From Kit 1

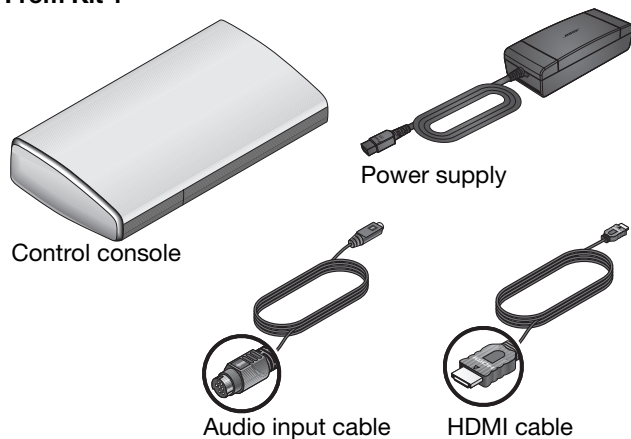

From the power cord kit

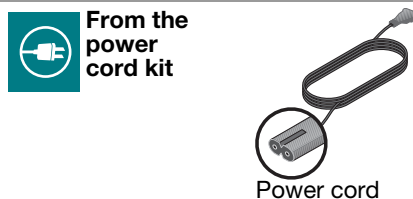 

 
1. Place the control console on a flat, stable surface near your TV.

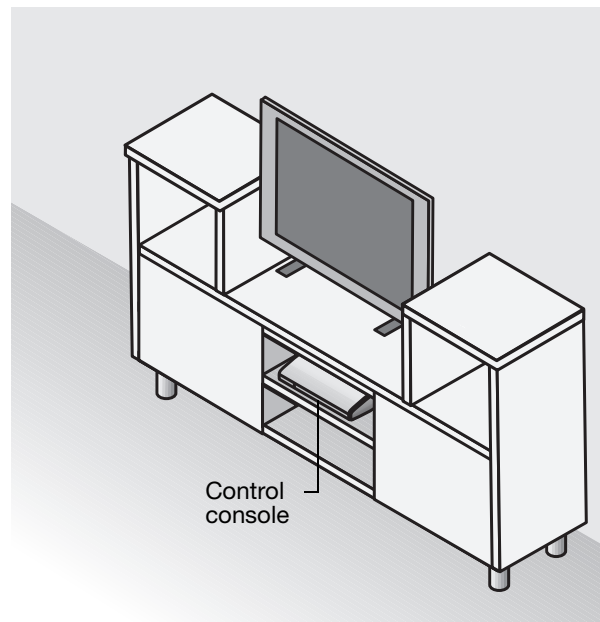


Note: Until your system is completely installed, it may be helpful to keep the control console positioned for easy access to its rear connection panel.

2. Plug one end of the HDMI cable into an HDMI INPUT connector on your TV.

 If an HDMI cable is already connected to an HDMI input on your TV, you can use this one. Just disconnect the other end.

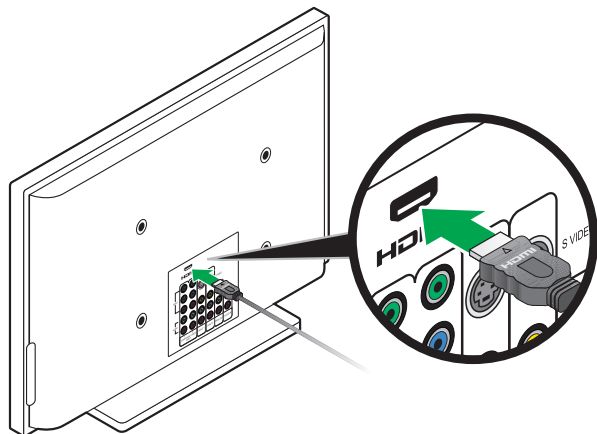

 3. Plug the other end of the HDMI cable you are using into the connector labeled **HDMI OUT Video to TV** on the control console.

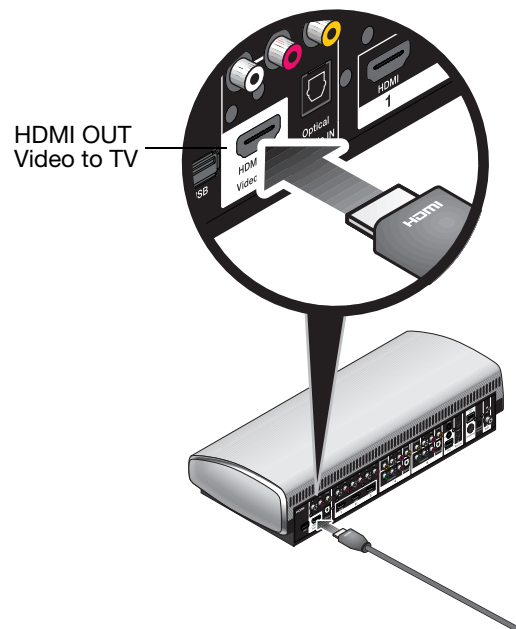


SYSTEM SETUP


4. Plug one end of the audio input cable into the **Acoustimass® Module** connector on the control console.


Make sure the flat surface with the arrow on the plug faces up.

 Leave the other end of the cable on the floor. You will be asked to connect it while setting up the next kit.

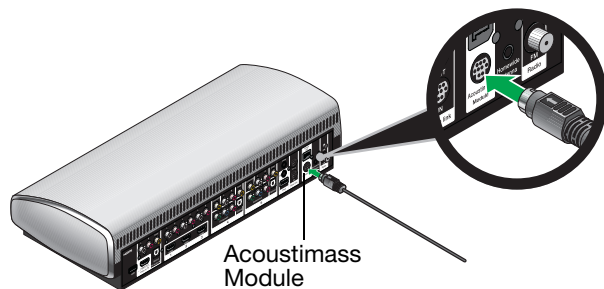

 5. Plug the power supply output cord into the control console **Power** connector.

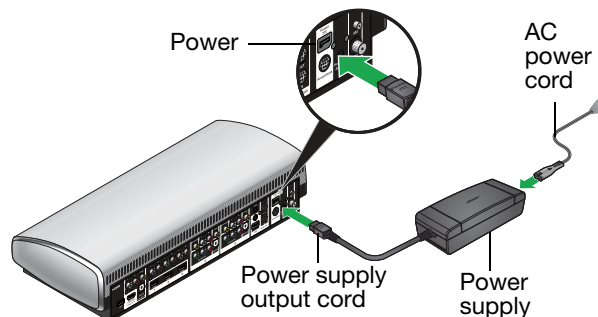


6. Remove a power cord from the power cord kit. 
7. Plug one end of the power cord into the power supply. *Make sure you push the plug in as far as it can go.*
8. Plug the other end of the power cord into a live AC (mains) power outlet.
9. Continue with Kit **2** on the next page.

2

Acoustimass® module kit

What you need for the following steps:

 From Kit 2

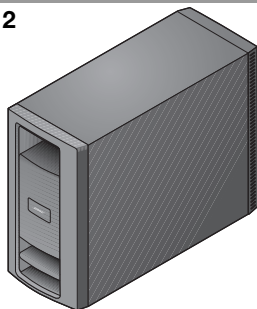

Acoustimass module

 


**From the
power
cord kit**




Power cord


1. Place the Acoustimass module on the floor at the same end of the room as the TV. Make sure there is a live AC outlet nearby.

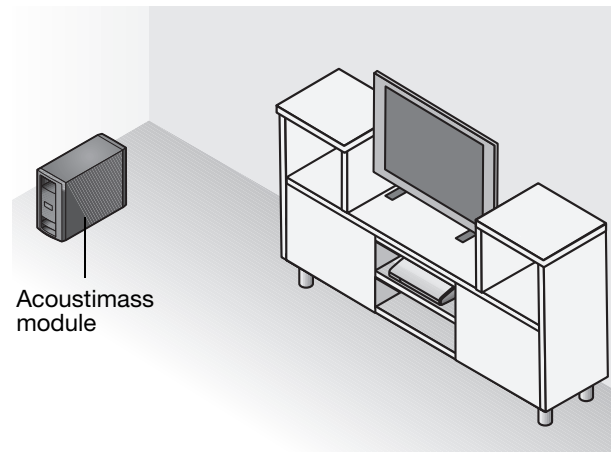

 2. Lay the module on its side and locate the connector panel.

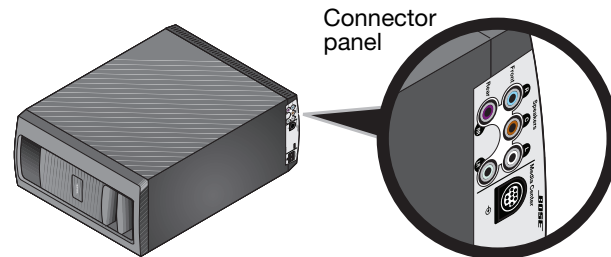


SYSTEM SETUP

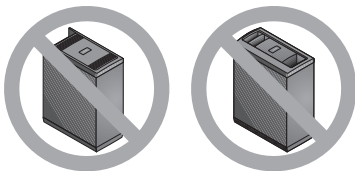 

CAUTION: DO NOT stand the Acoustimass® module on its front or back end.

3. Plug the free end of the audio input cable into the **Media Center** connector on the Acoustimass module.

 
Make sure the flat surface with the arrow faces the front of the module.

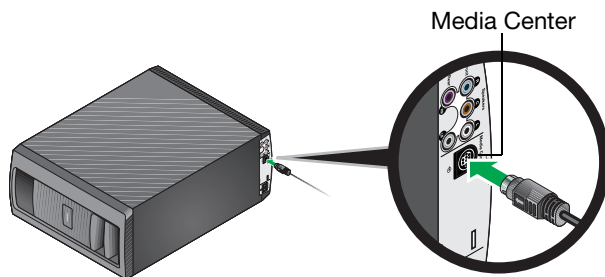

4. Remove a power cord from the power cord kit.



 5. Plug one end of the power cord into the **AC Power** connector on the Acoustimass module. *Make sure you push the plug in as far as it can go.*

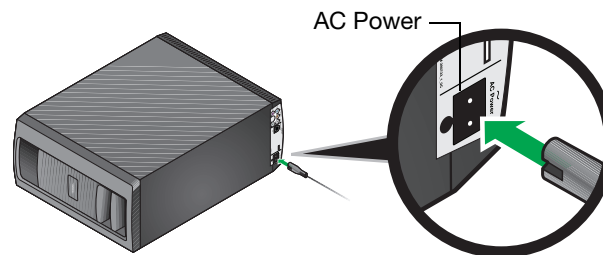

6. Plug the other end of the power cord into a live AC (mains) power outlet.
7. Continue with Kit **3** on the next page.

 
3

Speaker kit


What you need for the following steps:

From Kit 3: System speakers
(one set of the three types shown)

Jewel Cube® speakers




 (4) Left or right, front or rear speaker

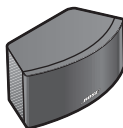


(1) Center front speaker

 Direct/Reflecting® cube speaker arrays



 (4) Left or right, front or rear speaker



(1) Center front speaker

Virtually Invisible® single cube speakers



(5) Left or right, front or rear, and center front speaker

Front speaker cables



Left front (L)
White

 


Center front (C)
Brown



Right front (R)
Light blue

Rear speaker cables

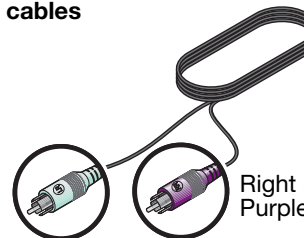


Left rear (LR)
Light green

Right rear (RR)
Purple

Note: You can place system speakers on wall brackets or floor stands. To purchase these accessories, contact your local Bose dealer or visit www.Bose.com.

SYSTEM SETUP

 
1. Place the center front speaker on a stable and level surface directly above or below the center of your TV screen as in the following example.

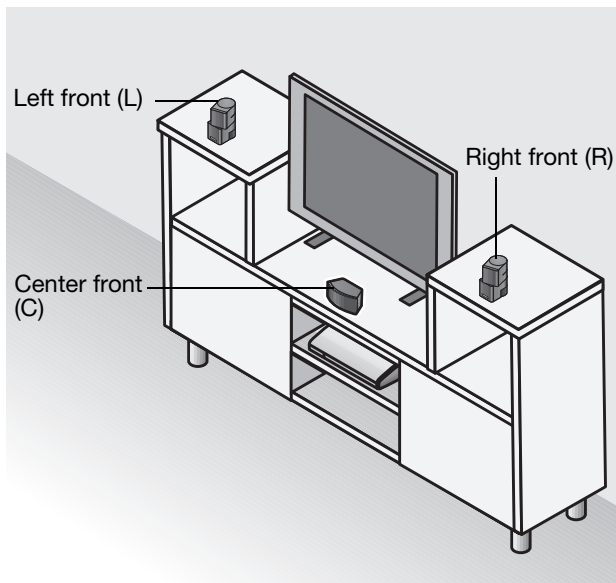


2. Place one speaker to the left and one to the right of the TV.
 - Keep each speaker within 3 ft (1 m) of the TV screen to prevent too much separation of the sound from the picture. Vary this distance to suit your room conditions and personal preference.
 - If placing the speakers in an enclosed bookcase shelf, position them at the front edge of the shelf.
 - If you have Jewel Cube® or Direct/Reflecting® cube speakers, rotate the cubes so that one cube of each speaker points forward into the room and the other points at a side wall to create reflected sound.



 
- 3.** Place the rear speakers toward the back of the room behind the viewers at ear height (when seated) or higher, if possible.

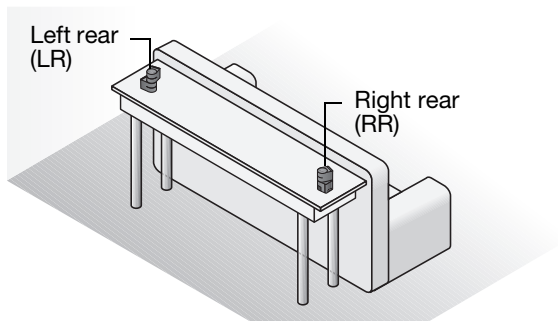


- Make sure the 50 ft (15.2 m) rear speaker cables will reach from the speakers to the Acoustimass® module.
- Aim the speakers away from the listeners to prevent them from pinpointing the exact location of the sound source.
- If you have Jewel Cube® or Direct/Reflecting® cube speakers, rotate the cubes so that one cube of each speaker points forward into the room and the other points at a side wall to create reflected sound.

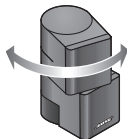 

 - 4.** Locate the colored connectors on the bottom panel of the Acoustimass module.

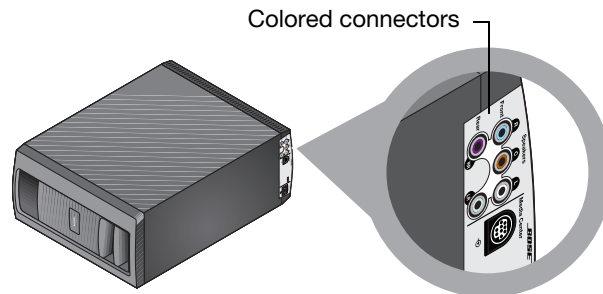


 - 5.** Plug the speaker cables into the Acoustimass module connectors. Be sure to match each cable plug to each connector by the color code.

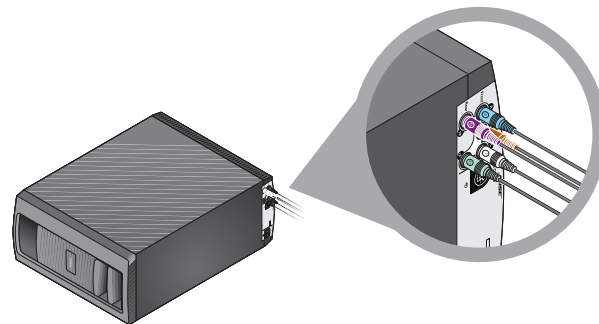


SYSTEM SETUP

 6. Locate the speaker position markings on the free ends of the speaker cables.

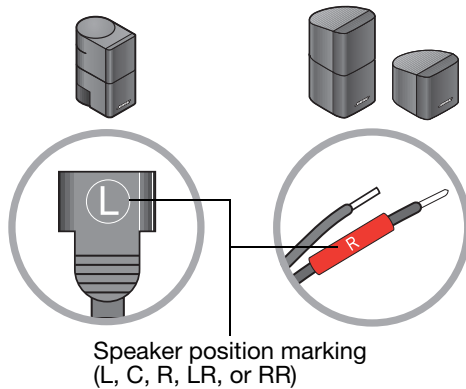

 
7. Using the speaker position markings, run each cable out to its respective speaker as in the following setup example of a room.

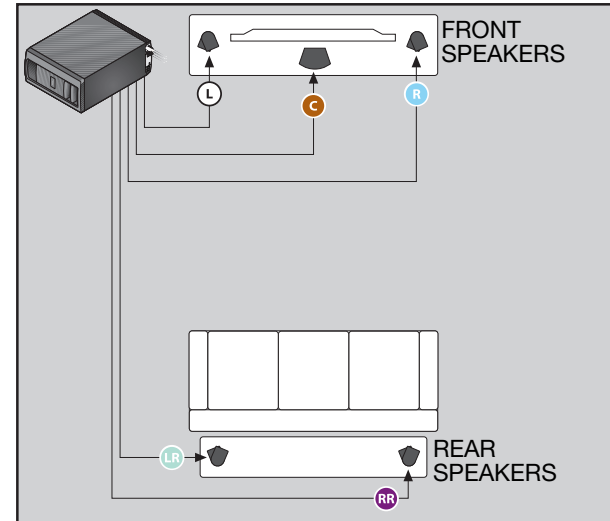

8. Connect the speaker cable to the type of speaker you have.


For Jewel Cube® speakers:

 Insert the plug into the speaker connector.

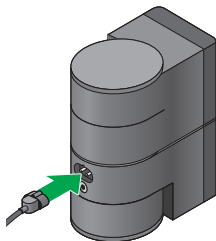


For Direct/Reflecting® and Virtually Invisible® single cube speakers:

 Press the button and insert the wires. Connect the red-collared wire to the red connector. Connect the other wire to the black connector.

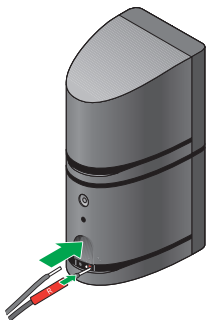


Note: The rear speaker cables for Direct/Reflecting® and Virtually Invisible® cube speakers are webbed together. You can pull them apart as needed.

 9. Put the Acoustimass® module in its final position:
- Upright (BEST) or on either side (ALTERNATE).

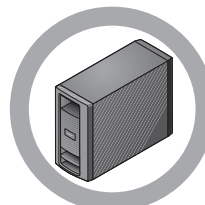

BEST

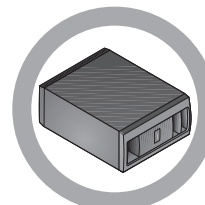 


ALTERNATE

- With the front opening facing into the room.
- At least 18 in (45 cm) from any TV to avoid magnetic interference with the TV image. Move it farther away if you still notice interference.

CAUTION: Do not put electronic media, such as video or audio tapes, on or next to the module for long periods of time. The magnetic field surrounding the module may erase some or all of the recorded material.

 CAUTION: DO NOT BLOCK the ventilation openings on the module. This can cause it to overheat.

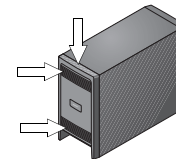

10. Continue with Kit **4** on the next page.

SYSTEM SETUP

4

Interactive kit

What you need for the following steps:

From Kit 4



Remote control
with batteries



 
ADAPTiQ® audio
calibration
headset

Congratulations! At this point you have set up the control console, the Acoustimass® module, and the speakers. You are now ready to turn on your system and enter the interactive phase of the setup process using the Unify™ intelligent integration system.

IMPORTANT!

- **Before you start, make sure your speakers and Acoustimass module are in their final positions.**
- **Do not connect any devices to the control console at this time. The instructions provided on your TV will tell you when to do this.**

1. Slide the battery compartment cover off the back of the remote control.

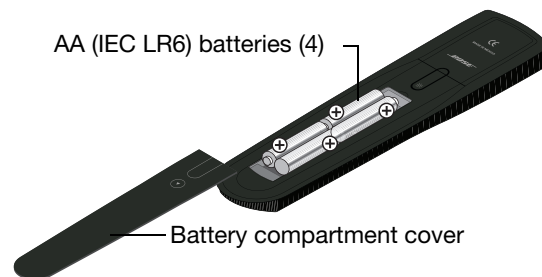

2. Install four AA (IEC LR6) batteries, matching the polarity markings (+ and -) to the markings inside the battery compartment.
3. Slide the battery cover back into place.

4. Press the power button (⏻) on the control console to turn on your system.

Because the system is in a low power state when in standby, it takes several seconds to start. When the power light changes from blinking to steady green, your system is ready to use.



5. Turn on your TV.
6. Using the remote that came with your TV, change the TV input to the one that is connected to your LIFESTYLE® system.
7. Follow the instructions on your TV screen. You will be prompted to do the following:
 - Select your language.
 - Optimize the audio from your system using the ADAPTiQ® audio calibration system.
 - Connect audio/video devices to the control console.
 - Configure your Bose® remote to control your connected devices.

Other Kit 4 items

The remaining items in Kit 4 may or may not be required to set up your LIFESTYLE® system. For more information on using these accessories or adding other devices to your system at another time, see the operating guide.



IR emitter cable



Stereo audio cable



AM antenna*



FM antenna*



Rubber feet for Acoustimass® module



Rubber feet for front center speaker



iPod/iPhone-compatible dock*



Operating guide



 
USB flash drive (for system updating only)

*For LIFESTYLE® V25 and V35 systems only.


SYSTEM SETUP

Applying rubber feet

When placing the Acoustimass® module on bare floors, you can attach the included rubber feet to the bottom of the module for greater stability and to protect your floor.

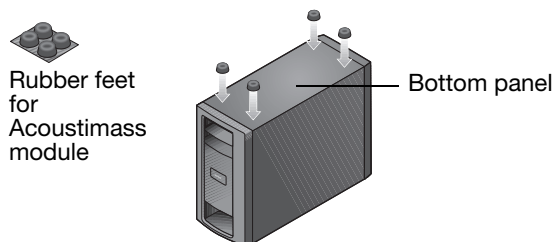

 Vibration can cause speakers to move, particularly if placed on a smooth surface like glass or highly polished wood. If you are placing the center speaker on such a surface, you can attach the included rubber feet to the bottom of the speaker for greater stability.

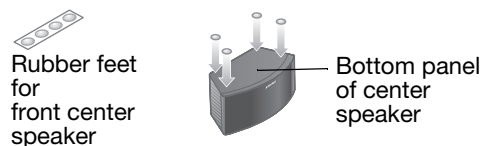

If you have setup problems

If you experience any difficulties during the setup process, such as an unrecognized device remote or a connection error, you can reactivate the interactive setup mode at any time and correct or change part of your system setup. See “Using the Setup Mode” in your system operating guide.

For help in trying to resolve any problems, see the troubleshooting table in your system operating guide.

Contacting customer service

For additional help in solving problems, contact Bose® Customer Service. See the address sheet included in Kit 4.

Applicable only for LIFESTYLE® V25 and V35 home entertainment systems



“Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPod and iPhone are trademarks of Apple, Inc., registered in the U.S. and other countries. All other marks are registered trademarks and trademarks of Bose Corporation.



324443-0010

BOSE[®]
Better sound through research[®]

©2010 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM324443 Rev.00



LIFESTYLE® 235/135
HOME ENTERTAINMENT SYSTEMS

LIFESTYLE® V35/V25
HOME ENTERTAINMENT SYSTEMS

 
LIFESTYLE® T20/T10
HOME THEATER SYSTEMS


SAFETY INFORMATION


Please read this guide

Please take the time to follow the instructions in this guide carefully. They will help you set up and use your system properly so you can enjoy its advanced features. Please save this guide for future reference.

All Bose products must be used in accordance with local, state, federal, and industry regulations.

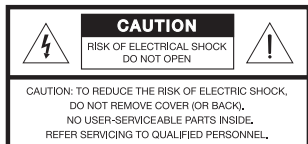

 The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

 The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in this guide.

WARNINGS:

- To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.
- Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard.
- Do not place any naked flame sources, such as lighted candles, on or near the apparatus.
- Contains small parts that may be a choking hazard. Not suitable for children under age 3.



CAUTIONS:

- Make no modifications to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance, and may void the warranty.
- Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.

Notes:

- Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- The product must be used indoors. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.
- This product is intended to be used only with the power supply provided.
- The product label is located on the bottom or the back of the product.
- The interconnect cables included with this system are not approved for in-wall installation. Please check your local building codes for the correct type of wire and cable required for in-wall installation.



Please dispose of used batteries properly, following any local regulations. Do not incinerate.

Additional safety information

See the additional instructions on the *Important Safety Information* sheet enclosed in the shipping carton.

Bose Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Directive 1999/5/EC and other applicable Directives. The complete Declaration of the Conformity can be found at: www.Bose.com/compliance



This product conforms to all EU Directive requirements as applicable by law. The complete Declaration of Conformity can be found at www.Bose.com/compliance.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

These devices comply with FCC and Industry Canada RF radiation exposure limits set forth for the general population. They must not be co-located or be operating in conjunction with any other antennas or transmitters.

These devices comply with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

The 135 Speaker array has an output power of 6 mW @ 2406-2474 MHz.

The 135 Acoustimass Module has an output power of 2 mW @ 2406-2474 MHz.

Designed with UEI® Technology™ Under License from Universal Electronics Inc. ©UEI 2000-2011.

HDMI™ and the HDMI logo are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and other countries.

iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple, Inc., registered in the U.S. and other countries.

Xbox is a trademark of Microsoft Corporation.

TiVo is a trademark of TiVo, Inc. or its subsidiaries.

Other trademarks are property of their respective owners.

Names and Contents of Toxic or Hazardous Substances or Elements

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)
PCBs	X	0	0	0	0	0
Metal parts	X	0	0	0	0	0
Plastic parts	0	0	0	0	0	0
Speakers	X	0	0	0	0	0
Cables	X	0	0	0	0	0

0: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T 11363-2006.

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T 11363-2006.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.

Applicable only for:

- **LIFESTYLE® V25/V35 home entertainment systems**
- **LIFESTYLE® T10/T20 home theater systems**



Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS, the Symbol, & DTS and the Symbol together are registered trademarks & DTS Digital Surround

and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

Applicable only for:

- **LIFESTYLE® 135/235 home entertainment systems**



Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380 and 6,487,535 & other worldwide patents issued & pending. DTS, the DTS Symbol and DTS+the DTS Symbol are registered trademarks & the DTS logos are trademarks of

DTS, Inc. Product includes software. ©2010 DTS, Inc. All Rights Reserved.

Applicable only for:

- **LIFESTYLE® V25/V35/135/235 home entertainment systems**



“Made for iPod,” and “Made for iPhone,” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

Made for:

iPod touch (1st, 2nd, 3rd, and 4th generation)

iPod nano (3rd, 4th, 5th, and 6th generation)

iPod classic

iPod with video

iPhone 4

iPhone 3GS

iPhone 3G

iPhone

Please complete and retain for your records:

LIFESTYLE® model: _____

Control console serial number (on bottom panel): _____

Speaker array serial number
(on bottom panel of LS135 systems only): _____

Acoustimass® module serial number (on back panel): _____

INTRODUCTION	3
System features	3
If you need help	3
CONTROLS AND INDICATORS	4
Remote Control	4
Control Console	7
Speaker Array (135 systems only)	8
Acoustimass® Module (135 systems only)	8
POWER ON/OFF CONTROLS	9
Starting your system	9
Turning on your TV	9
Shutting down your system	9
OPERATING YOUR CONNECTED DEVICES	10
Selecting a connected device	10
Watching TV	11
Using a set-top box	11
Using the tuner in your TV	11
Tuning to a TV station	11
Playing audio/video devices	12
Listening to a Bose link input device	12
Playing an iPod or iPhone (235/135 or V35/V25 systems only)	13
Using the front console inputs	14
Front USB input	14
Front Analog A/V input	15
Front HDMI™ input	15
Changing the image view	15
LISTENING TO THE RADIO (235/135/V35/V25 ONLY)	16
Selecting the radio	16
Tuning to a station	16
Storing a preset station	16
Recalling a preset station	16
Deleting a preset station	16
Optional radio tuner settings	16

MORE BUTTONS AND SYSTEM OPTIONS	17
MORE buttons	17
Activating a MORE button function	17
Button function definitions	17
Changing system options	18
CHANGING YOUR SYSTEM SETUP	22
UNIFY® system overview	22
Using the UNIFY menu	22
ADDING SOUND TO ANOTHER ROOM (235/135/V35/V25 ONLY)	23
Expanding your system	23
Expansion guidelines	23
CARE AND MAINTENANCE	24
Troubleshooting	24
Resetting the system	26
Pairing the remote with the console	26
Performing a system software update	26
Contacting customer service	27
Replacing the batteries	27
Cleaning	27
Limited warranty	28
Technical information	28

Welcome

Thank you for choosing a Bose® LIFESTYLE® system for your home. This elegant and easy-to-use system delivers superior performance for both music and video.

By now you should have successfully set up your system using the UNIFY® intelligent integration system and calibrated the sound for your room using the ADAPTiQ® audio calibration system.

This guide describes your new remote control and shows you how to operate your system and its connected devices.

System features

All systems:

- UNIFY intelligent integration system to help you easily add devices to your system
- 3D video capability*
- ADAPTiQ audio calibration system that optimizes system performance for your room
- RF remote control
- HDMI™ connectivity
- Video up-conversion to 1080p
- Photo viewing using a USB flash drive

*To enjoy 3D video, you must connect a 3D-capable TV and a 3D-capable Blu-ray Disc™ player, game console, cable box, or other source device to your LIFESTYLE® system.

Additional features for 235/135 and V35/V25 systems only:

- Interface and dock compatible with iPod and iPhone devices
- AM/FM radio
- Can deliver sound in up to 14 additional rooms or locations (not available on systems sold in Japan)

If you need help

If you experience any operating difficulties, be sure to check the troubleshooting table on page 24. You can solve the most common operating problems using the helpful tips provided there. If you need additional help or service for your product, please refer to the included contact sheet.

IMPORTANT! – Please register your product right away!

Registering your product enables you to receive notifications of system software updates to keep your product performing optimally. It also allows us to send you information about new products and special offers from Bose.

 
Please follow the instructions on your Product Registration Card to register. Failure to register will not affect your limited warranty rights or your eligibility to obtain system software updates.

CONTROLS AND INDICATORS

Remote Control


Using the remote

This advanced radio frequency remote works throughout the room. You do not need to aim it at the control console.

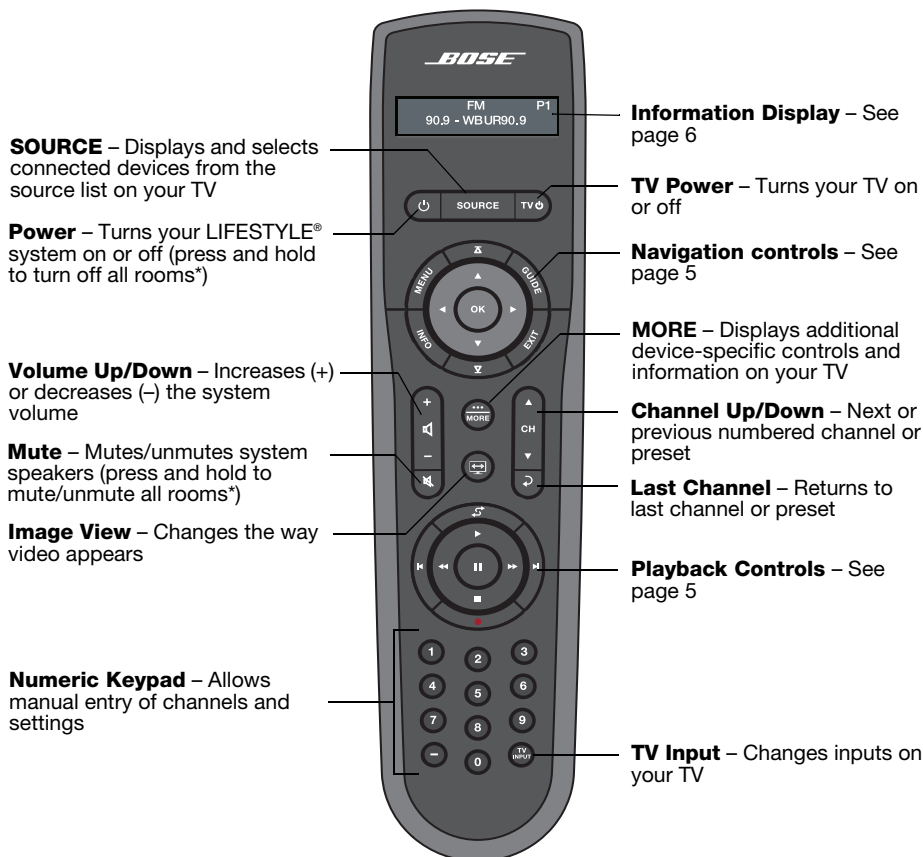


*For system delivering sound to another room through Bose® link OUT (not applicable to systems sold in Japan).

 Navigation controls

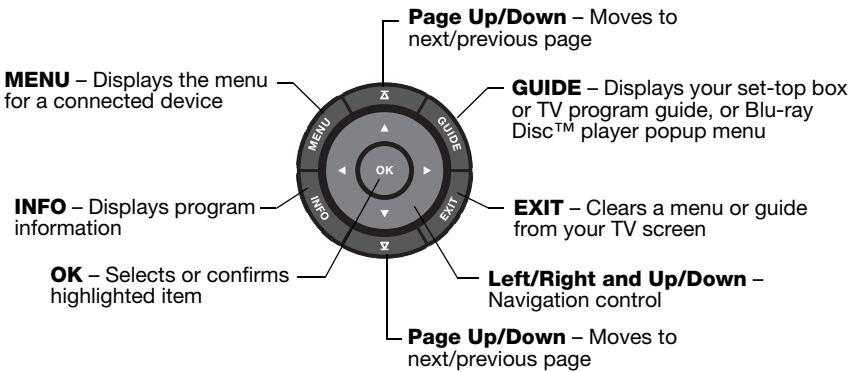

Note: See “Operating Your Connected Devices” on page 10 for more details on using navigation and playback controls with selected sources.

 Playback controls

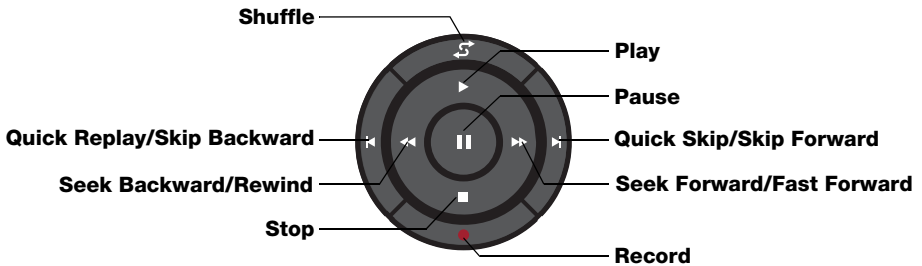


Information display (235/135 and V35/V25 systems only)


The display provides operating and system status information.

Examples:

 Source identification




Volume

 


Radio tuner



 iPod




Operating prompt

 

Remote glow button

 Pressing the glow button on the rear of the remote illuminates the remote buttons (and the display for 235/135 and V35/V25 systems). The light turns off automatically after several seconds to prolong battery life.

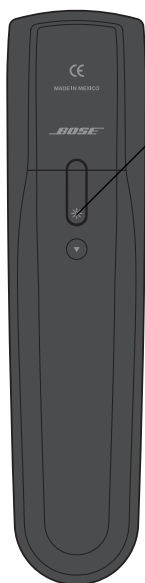

Glow button

 


To adjust the illumination level:

Note: If the currently selected source is AM or FM, switch to any other source before making this adjustment. This prevents unintentionally deleting a radio preset.

1. Press and hold the Glow and OK buttons at the same time for 5 seconds.
2. Press the up/down navigation button to select Brightness or Contrast.
3. Press the left/right navigation button to decrease or increase the illumination level.
4. Press either the OK or Glow button to return to normal operation.

Control Console

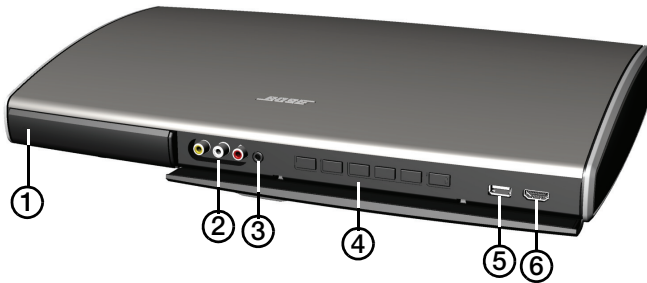


① Power light

- Red.....System is off (Standby)
- Blinking greenSystem is starting
- Steady greenSystem is on and ready to use in the main room or other rooms
- Amber.....System off and charging iPod or iPhone

② Front A/V inputs

 
Used for temporarily connecting an audio/video device such as a camcorder.



③ Headphones output

Accepts stereo headphones with a 3.5 mm stereo plug. Volume level is set by the volume controls.

 ④ Control buttons

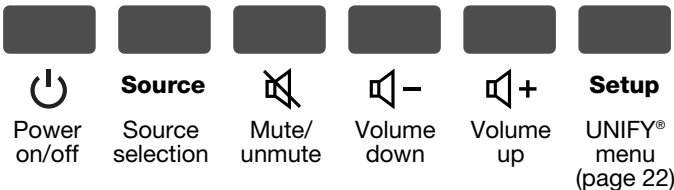


⑤ Front USB input

Used for viewing photo files from a USB device including a digital camera. Also used for updating system software.

⑥ Front HDMI™ input

Used for temporarily connecting an HDMI device such as a video camera.

 
Speaker Array (135 systems only)



Status indicator:

- OffSpeaker array and Acoustimass® module are connected
- Slow blinking orange.....Speaker array is available to make a wireless connection
- Fast blinking orange.....Speaker array is disconnected and trying to connect
- Solid red.....System error

 Acoustimass® Module (135 systems only)

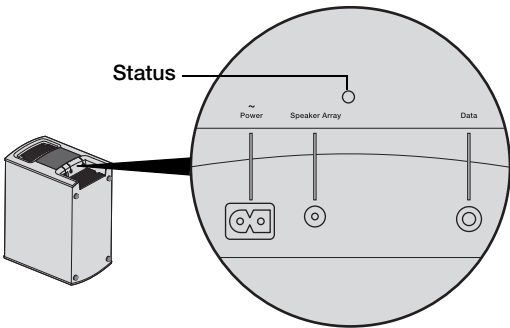

Status indicator:

- Solid orange Speaker array and Acoustimass module are connected
- Blinks orange every 3 secs..... Acoustimass module is disconnected from speaker array (or speaker array is off: Acoustimass module standby)
- Slow blinking orange Acoustimass module is available to make wireless connection
- Solid red System error

Starting your system



Press the power button on the remote or on the console to start your system. In several seconds, the power LED on the console changes from blinking to steady green. The system is now ready to use.

You also can start the system in two other ways:

SOURCE

Pressing the remote SOURCE button also starts your system and puts the SOURCE menu on your TV screen.

Setup

Pressing the Setup button on the console also starts your system and puts the UNIFY® menu on your TV screen.

Turning on your TV



If you programmed your remote during the initial setup, press the TV power button on the remote control to turn on your TV. Otherwise, use the remote that came with your TV.

Shutting down your system



Press the power button on the remote or on the control console. The system will shut down automatically after a few seconds.

However, if you decide to access the power controls for connected devices, automatic shutdown will be stopped and you must complete the shutdown using the onscreen controls.

 
OPERATING YOUR CONNECTED DEVICES

Selecting a connected device

The SOURCE menu allows you to select your connected devices. When there are more than 10 selections in the SOURCE menu (more than 10 sources are connected to the system), an arrow appears either at the top or bottom of the menu.

1. Press the SOURCE button on the remote to display the list of connected devices on your TV.

If more sources are available than are displayed, an arrow appears at the bottom (or top) of the list.

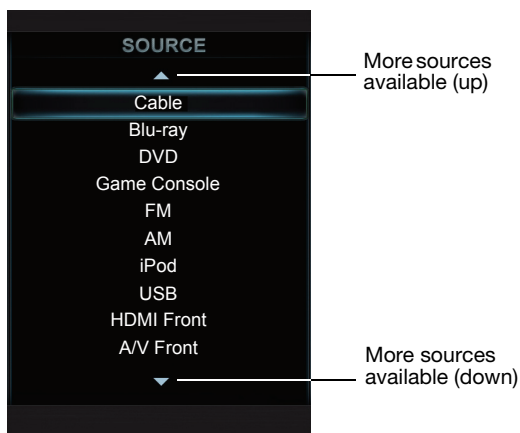

2. Keep pressing SOURCE to move the highlight down the list and select the source you want.
 - You can also use the up (▲) or down (▼) navigation buttons to select a source.
 - If you named a device during the setup process, the assigned name appears in the list. Unnamed devices appear as generic inputs such as “Input 1 (HDMI)” and “Input 2 (HDMI).”
 - If you select a device that is not turned on, a message will appear on the screen reminding you to make sure the device is turned on.

Note: When listening to audio sources like iPod, the system will automatically enter screensaver mode to prevent the risk of screen burn-in. Press any button on the Bose remote to restore the picture.

To disable the screensaver, see “Changing system options” on page 18.

The UNIFY® intelligent integration system sets up your LIFESTYLE® remote to control each of your devices.

If one or more of these devices does not respond to the LIFESTYLE® remote, see “Troubleshooting” on page 24.

Watching TV

Your TV may be receiving its program content through a set-top box or the tuner built into your TV.

Note: Since most televisions come with an IR (infrared) remote, you may need to point the Bose® remote at your TV to operate it.

Using a set-top box

If you connected a cable, satellite, or other set-top box to your TV, it will appear in the SOURCE menu under the name you assigned it during the setup process.

1. Press the remote SOURCE button and select the device that provides your TV programs.
2. Tune to a station. See “Tuning to a TV station,” below.

Using the tuner in your TV

If you are using the tuner in your TV to receive TV programs:

1. Press the remote SOURCE button and select TV.
2. Press the TV Input button to select the internal tuner in your TV.
3. Tune to a station. See “Tuning to a TV station,” below.

To return to using other sources, use the TV Input button to first select the input for the Bose system, then press the SOURCE button and select another source.

Tuning to a TV station

You can tune to a TV station using any of the following methods:



Enter the channel number on the keypad and press OK. Use the dash button for channel numbers using a dash or period.



Press Channel Up (▲) or Down (▼) to change channels.









 









Press ↺ to tune to last selected channel.



Press GUIDE. Use the navigation, page up/down, and OK buttons to select a station from the program guide.

Playing audio/video devices

During the interactive setup process, you may have connected a CD, DVD, DVR, Blu-ray Disc™ player, or other such device. These would typically be connected to inputs 1-5. If you programmed the Bose® remote for the device, you can use the following controls to operate the selected device.

	MENU	Device menu (if available) or system setup menu
	GUIDE	Blu-ray Disc player pop-up menu
	INFO	Device information
	EXIT	Exit menu
		Up one item
		Down one item
		Move left
		Move right
		Select
		Next page, channel, or disc
		Previous page, channel, or disc
		Play
		Pause
		Stop
		Record
		Fast forward or search forward
		Fast rewind or search reverse
		Quick skip or skip forward
		Quick replay or skip backward
		Shuffle mode

Listening to a Bose link input device

 
You can use your LIFESTYLE® system to listen to content from a Bose link-compatible system, such as another LIFESTYLE® system. Connect that system to the Bose link IN connector on the rear panel of the control console. To listen to the Bose link source, press the SOURCE button and select Bose link. **Be sure to connect your Bose link device before attempting to select it. It will not appear in the SOURCE list until it is connected.**

Playing an iPod or iPhone (235/135 or V35/V25 systems only)

Your LIFESTYLE® system can play audio and video from your iPod or iPhone.

Be sure to dock your iPod before attempting to select it. It will not appear in the SOURCE list until you dock it.

Your iPod or iPhone menus and content appear on the left side of your screen as shown in the following example. The “Now Playing” track appears on the right.

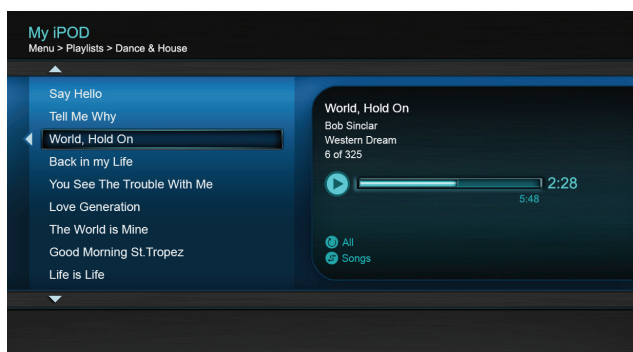

Note: For a list of compatible iPod and iPhone models, refer to page iv.

The following controls are available to operate your connected iPod.



MENU	Up one menu level (press and hold to go to top menu level) (If playing video, pause and return to menu)
	Up one page
	Down one page
	Up one menu item (press and hold to scroll quickly)
	Down one menu item (press and hold to scroll quickly)
	Up one menu level (If playing video, pause and return to menu)
	Down one menu level
	Down one menu level



	Play
	Pause
	Stop
	Next track or audio bookmark
	Previous track or audio bookmark
	Fast forward
	Fast rewind
	Shuffle on/off

 
Using the front console inputs

The front of the console provides analog A/V inputs plus a USB and an HDMI™ input. These inputs appear in the SOURCE menu as A/V (Front), USB, and HDMI (Front) only when a device is connected. These inputs are provided for temporarily connecting devices such as digital cameras and video cameras.



Front USB input

Your LIFESTYLE® system can display photo files (.jpg or .jpeg format only) from a USB storage device.

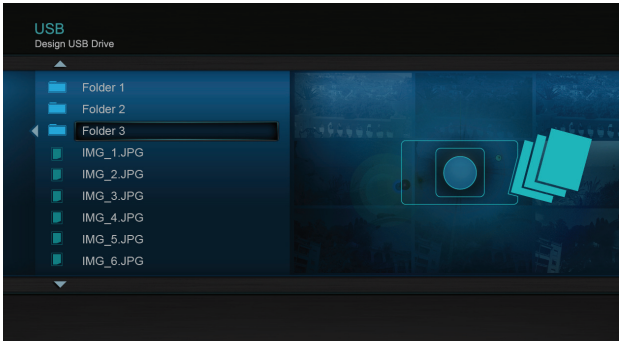When selecting the USB source, folders appear at the top of the list on the left followed by single image files. Selecting a folder displays its contents.



Use the following controls for viewing digital photos.

	▲	Up one menu item (press and hold to repeat)
	▼	Down one menu item (press and hold to repeat)
	◀	Up one folder level, or exit and return to browsing folders (if viewing a slideshow)
	MENU	Up one folder level, or exit and return to browsing folders (if viewing a slideshow)
	▶	Down one folder level
	OK	Down one folder level (if a folder is highlighted), or Play slideshow (if a photo file is highlighted)
	△	Up nine items
	▽	Down nine items
	EXIT	Exit slideshow and return to browsing folders
	▶	Play slideshow of highlighted folder
		Pause slideshow
	■	Exit slideshow and return to browsing folders
	▶	Next image
	◀	Previous image

Front Analog A/V input

You can use this input for devices that have composite video and left/right audio outputs. The Bose® remote does not control a device connected to this input. You need to use the controls on the device itself or the remote that came with it.

Front HDMI™ input

You can use this input for devices that have an HDMI output. The Bose remote does not control a device connected to this input. You need to use the controls on the device itself or the remote that came with it.

Changing the image view



Press the image view button to display a menu of video formatting choices. Continue to press this button to highlight your choice. Your TV picture will change momentarily after you select a format.



Normal Leaves original video image unchanged.



Auto-Wide Fills width of the screen without cropping any content.



Stretch 1 Stretches video image evenly from the center.



Stretch 2 Stretches the edges of the video image much more than the center portion of the image.



Zoom Enlarges the video image (press the up/down navigation buttons to vertically offset the image on your screen).



Gray Bars Places vertical gray bars on the left and right of a standard-definition video image.

Note: When displaying 3D video, the Image View button does not display a menu of video formatting choices. This is because the shape of the video cannot be changed when watching 3D video.

LISTENING TO THE RADIO (235/135/V35/V25 ONLY)

Selecting the radio

1. Press the SOURCE button.
2. Keep pressing the SOURCE button to select FM or AM in the SOURCE list.

Tuning to a station

 


- Press **▶** (increase) or **◀** (decrease) to tune up or down the frequency band.
OR
- Press **▶▶** (seek next) or **◀◀** (seek previous) to find the next/previous strong station.

Storing a preset station

The built-in radio tuner can store up to 25 FM and 25 AM preset stations.

1. Tune to a radio station.
2. For presets 1-9, press and hold the number key. For 10-25, press and hold the OK button to store the station in the next available preset.



Recalling a preset station



Press the channel up **▲** or down **▼** button to go to the next or previous preset.



For quick access to presets 1-9, press the number key of the preset.

Deleting a preset station

1. Recall the preset station you want to delete.
2. Press and hold the OK button until the preset number disappears from the display.

 
Optional radio tuner settings

1. Press the MORE button and select OPTIONS.
2. Select an option from the menu (see “OPTIONS menu” on page 19 for details):
 - Current Station: Allow Stereo, Stereo Off
 - RDS: On, Off

MORE buttons



Press the MORE button to display additional button functions along the top of your TV screen for the current source. The functions that appear depend on the selected source. When there are more than 13 available button functions in the More display, an arrow appears either at the left or right end of the menu to indicate that there are available button functions that are not displayed. The following example shows how these buttons appear on your TV.



Additional source
buttons (left)

Additional source
buttons (right)

Activating a MORE button function

1. Press the remote MORE button.
2. Using the left (◀) and right (▶) navigation buttons, highlight the button function you want to activate.

If an arrow appears at the end of the list, continue pressing the left (◀) or right (▶) navigation button to scroll to the remaining button functions.

3. Press the remote OK button.

Button function definitions



Turns device power on/off.



Displays a list of favorite channels.



Enables or disables Teletext functions.



Enables or disables Internet functions.



Displays program guide for next day.



Displays program guide for previous day.



Displays playlist of recorded programs.



Picture-in-picture mode.



Video on demand.



Switches your TV to live programming.



Switches between main features (from DVD to VCR, for example) on a combo device.



Moves to the "Home" state of the device.



Selects a repeat option on the current source.



Switches tuners in a multi-tuner device.
























 




Switches between TV and radio on a set-top box that provides both.



Switches tuners in a multi-tuner device.

Button function definitions (continued)


	Allows you to enter a 3-digit number (Japan only).
	Displays the OPTIONS menu. See “Changing system options,” below.
   	Accesses Red, Green, Yellow, or Blue functions on Blu-ray Disc™ players, set-top boxes and Teletext.
	Accesses the system menu for your set-top box.
	Access the Top Menu (or Title Menu) on Blu-ray Disc™ players.
   	Accesses A, B, C, or D functions in an interactive program guide.
    	Accesses Xbox® functions.
	Accesses data broadcast on a tuner device (Japan only).
   	Accesses PlayStation® functions.
	Selects different types of video broadcast (EU only).
 	Allows you to rate certain content, such as a TiVo® program.
	Accesses specific “tools” on Blu-ray Disc™ players or set-top boxes.

Changing system options

The number of items appearing in the OPTIONS menu depends on which source is currently selected.

1. Press the remote MORE button.
2. Using the left/right (◀ ▶) navigation buttons, highlight OPTIONS.
3. Press the remote OK button to display the OPTIONS menu for the current source.

 The following is an example for a video device.

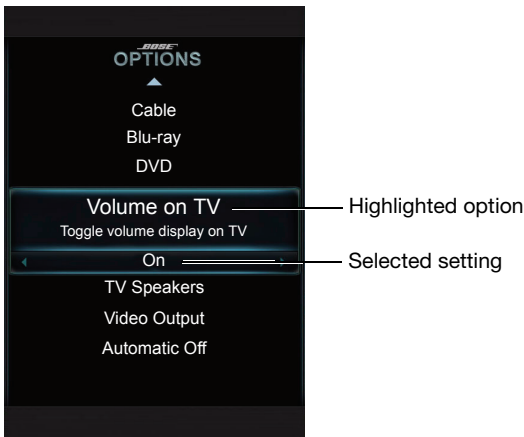

4. Using the up/down (▲ ▼) navigation buttons, highlight the option you want to change.
5. Using the left/right (◀ ▶) navigation buttons, select the setting.
6. Press the remote EXIT button when done.

OPTIONS menu

Factory settings are in bold type.

Option	Available Settings
Sound <i>(Not available on 235 or 135 systems)</i>	Original Plays stereo audio when stereo audio is received from the source Recommended Plays 5-channel audio whether 2- or 5-channel audio is received from the source Alternative Plays 5-channel audio when either stereo or 5-channel audio is received from the source Enhanced Mono..... Plays simulated surround sound when monaural audio is received from the source
Current Station <i>(Not available on T20 or T10 systems)</i>	Allow Stereo Allows stereo sound from the current stereo FM radio station Stereo Off Changes the current station to mono, which can help when tuning to a weak radio station
RDS <i>(Not available on T20 or T10 systems)</i>	On Displays RDS information on the remote Off No RDS information on the remote
Game Mode	On Produces improved video performance and reduced latency for game systems Off Normal video performance

MORE BUTTONS AND SYSTEM OPTIONS

Option	Available Settings
Audio Compression	Off No change to audio track Enhance Dialog... Enhances sound output so you can hear movie dialogs more distinctly Smart Volume Reduces the range of volume levels in a movie soundtrack so the difference between extremely loud outbursts and soft sounds is less noticeable
Audio Track	Track 1 Selects track 1 from an external audio stream with multiple audio tracks Track 2 Selects track 2 from an external audio stream with multiple audio tracks Both Tracks Selects tracks 1 and 2 from an external audio stream Not Available Automatically selected when only one track is received
Volume Offset	Increases the volume level of the selected source relative to other sources (0 to 10)
Source Overscan (2D only)	On Applies video overscan to the current video source Off Video source unaffected <i>When a 3D source is playing, "Not Available" will be displayed instead of an overscan value</i>
System Bass	Adjusts bass level: -9 to Normal to +6 (After ADAPTiQ® calibration) -14 to Normal to 14 (No ADAPTiQ calibration)
System Treble	Adjusts treble level: -9 to Normal to +6 (after ADAPTiQ® calibration) -14 to Normal to +14 (no ADAPTiQ calibration)
2D A/V Sync (2D only)	Adjusts the audio delay to synchronize audio with the 2D video -2 to Normal to +5
3D (3D only)	Sets the 3D image to display correctly with the appropriate 3D glasses. Automatic Sets the correct 3D image format automatically Side by side Selects the side by side format Top and bottom Selects the top/bottom format
3D A/V Sync (3D only)	Adjusts the audio delay to synchronize audio with the 3D video -2 to Normal to +10
Power Down	Normal System shuts down without presenting the Power Down Menu Power Down Menu ... System presents the Power Down Menu when shutting down
Screensaver	On Displays a screensaver after 20 minutes of no user activity when playing audio-only sources Off Disables screensaver mode
Rear Speakers (Not available on 235 or 135 systems)	Adjusts the volume level of the rear speakers relative to front speakers (-10 to Normal to +6) <i>This option is unavailable if the Speakers option is set to Stereo (2) or Front (3)</i>
Center Speaker (Not available on 235 or 135 systems)	Adjusts the volume level of the front center speaker relative to other speakers (-8 to Normal to +8) <i>This option is unavailable if the Speakers option is set to Stereo (2)</i>

MORE BUTTONS AND SYSTEM OPTIONS

Option	Available Settings
Speakers <i>(Not available on 235 or 135 systems)</i>	<p>Stereo (2)Activates only front left and right speakers</p> <p>Front (3)Activates only front left, center, and right speakers</p> <p>Surround (5) Activates all front and rear speakers</p>
Volume on TV	<p>On Enables the system to display the volume level meter and mute indicator on your TV</p> <p>Off Prevents the display of the volume level meter and mute indicator</p>
TV Speakers	<p>OnSends HDMI™ audio to your TV (audio from the TV is not affected by plugging headphones into the control console or by pressing Mute or Volume on the remote)</p> <p>OffSends HDMI audio to the LIFESTYLE® system speakers</p>
Video Output <i>(2D only)</i>	<p>Changes the resolution (Standard Definition/720p/1080i/1080p) of the video signal sent to your TV (only settings supported by your TV appear as options)</p> <p><i>When a 3D source is playing, the output resolution always matches the resolution of the connected 3D source. Video Output then shows the automatically-set output resolution, and you cannot change resolutions while a 3D source is playing</i></p>
Automatic Off	<p>EnabledThe system, including the Bose® link second zone, automatically turns itself off after four hours of inactivity (no user interaction)</p> <p>DisabledThe system will not turn itself off automatically</p> <p>Note: <i>The system will automatically turn off after 15 minutes after you no longer hear audio or see video from a video source or you no longer hear audio from an audio source. The 4-hour Automatic Off setting does not affect this function.</i></p>

UNIFY® system overview

The UNIFY intelligent integration system guides you through the initial process of setting up and configuring your system. It helps you choose the right cables and inputs, and program the Bose® remote to operate your connected devices.

After completing the initial setup, you can use the UNIFY system at any time to change your system setup and configuration.

Using the UNIFY menu

To display the UNIFY menu on your TV, press the Setup button on the front of the control console. Using the navigation buttons on the remote, select the function you want and follow the instructions on the screen.

Menu item	What you can do
Resume initial setup	If your initial setup is incomplete, you can return to the UNIFY setup process at the last completed event.
Restart initial setup	If your initial setup is incomplete, you can start the UNIFY setup process from the beginning.
Reconnect Acoustimass® (135 systems only)	Follow the onscreen instructions to reconnect the speaker array with the Acoustimass module.
Language	Change the language of the onscreen display.
ADAPTiQ®	Start the ADAPTiQ audio calibration process. After ADAPTiQ has been run, this menu item allows you to disable or enable ADAPTiQ.
TV setup	After your TV is connected to the console, you can: <ul style="list-style-type: none">• Program the LIFESTYLE® remote to control your TV• Manually enter remote control IR device codes• Replace your TV• Add, change, or remove the TV audio connection
Source setup	For sources connected to Input 1-5 of the control console, you can: <ul style="list-style-type: none">• Change the name of the device• Program your remote to control the device and add the IR emitter• Manually enter remote control IR device codes• Remove the device• Add or change the type of audio or video connection
Add a new device	After your initial setup is complete, you can add another device or accessory to your system.
Homewide (135/235 and V25/V35 systems only)	This menu item allows you change house and room codes if you are expanding your system to deliver sound in other rooms of your home. See “Adding Sound to Another Room (235/135/V35/V25 only)” on page 23.
Update	Used to perform a system software update (see “Performing a system software update” on page 26 for more information).
Teach mode	This item is used to send IR codes to program a learning remote.
Exit UNIFY	Closes the UNIFY menu and returns you to the last source selected.

ADDING SOUND TO ANOTHER ROOM (235/135/V35/V25 ONLY)

Expanding your system

Your LIFESTYLE® 235/135 or V35/V25 system can deliver Bose® quality sound in up to 14 additional rooms in your home. Connecting a Bose link-compatible product to the Bose link OUT connector on the control console enables you to listen to a different sound source in other rooms. For example, a DVD movie can be playing in the main room while you listen to the AM/FM radio in the other room.

For more information or to purchase additional products, contact your local Bose dealer. See the contact list included with your system.

Note: This feature is not available on T20 and T10 systems, and systems sold in Japan.

Expansion guidelines

To set up a Bose link-compatible system in another room, follow the instructions included with the expansion product and be aware of the following:

- **Bose link connections** – Your system cannot operate with Bose link-enabled products connected to both the Bose link IN and Bose link OUT connectors at the same time.
- **Room codes** – The speaker system and the remote in your other room must be set to the same room code. See the owner's guide that came with the Bose link product for information on setting room codes.
- **House code** – The house code is what enables the remote control in another room to communicate with the control console. If you set up a Bose link-enabled speaker system in another room, the remote used in that room must be set to the same house code that is stored in the control console.

Your system is set to house code 15 at the factory. To see the house code, select Homewide in the UNIFY® menu and then select house code. On the screen, you will see the house code and a representation of how the second room remote control switches should be set to match the house code in the control console.

Your system has two house code modes. The Standard mode provides 16 house codes and 16 room codes. If you live in a multi-unit dwelling, you can select the Alternative mode that provides 64 house codes and 4 room codes.

Note: Switching between Standard and Alternative house code modes resets the house code to zero.

- **Audio connections for a second room** – To hear audio in another room from any device connected to HDMI™ input 1, 2, or 3, you must also make an analog audio connection between the device and the left (L) and right (R) analog connections for that input. Likewise, you must also make analog audio connections if a digital audio connection is made for input 4 or 5.
- **Radio operation** – Using an expansion room remote, you can select and control the radio that is built into the control console in the main room. However, if both rooms want to listen to the radio at the same time, they can only listen to the same station.

Troubleshooting

Problem	What to do
The system is not responding to initial operation of my Bose® remote	<ul style="list-style-type: none"> • Make sure the control console is turned on. • Check to see if the remote batteries are installed correctly or need replacement. See “Replacing the batteries” on page 27. • Reset the system. See “Resetting the system” on page 26. • Press any remote key and watch the power light on the control console. It should blink with each press. If not, see “Pairing the remote with the console” on page 26 and follow the procedure.
The Bose remote does not control a device I added during the initial setup	<ul style="list-style-type: none"> • Try setting up the device again. Press the Setup button on the control console. Select the device options and follow the onscreen instructions to set up the device again. • Your system may need a software update. See “Performing a system software update” on page 26.
The video connection from a connected source is less than optimum	<ul style="list-style-type: none"> • To change a video connection, press the Setup button on the control console and select the device setup options. Follow the onscreen instructions.
System doesn’t do anything	<ul style="list-style-type: none"> • Make sure the AC power cord is inserted securely into the power supply. • Make sure the Acoustimass® module and the power supply are fully plugged into a live AC (mains) outlet. • (135 systems only) Make sure the speaker array is plugged into a live AC (mains) outlet. • Select a connected device from the SOURCE menu. • Reset the system. See “Resetting the system” on page 26.
No sound	<ul style="list-style-type: none"> • Make sure the Acoustimass module is plugged into a live AC (mains) outlet. • (135 systems only) Make sure the speaker array is plugged into a live AC (mains) outlet. • Increase the volume. • Press the Mute button (M) and make sure your system is not muted. • Check the input connections on the control console. Make sure that you have selected the right source. • Make sure that the audio input cable is firmly plugged into the Audio Out connector (not Bose® link) on the control console and the other end is firmly seated into the Media Center connector on the Acoustimass module. • (135 systems only) Make sure that the audio input cable is firmly plugged into the Audio Out connector (not Bose® link) on the control console and the other end is firmly seated into the Audio In connector on the speaker array. • (135 systems only) Try moving any possible sources of wireless interference, such as a wireless computer network router, another wireless device, or a microwave oven, further away from the system. • For radio operation, connect the FM and AM antennas. • Reset the system. See “Resetting the system” on page 26.
Sound quality has changed and speaker array status indicator is blinking orange (135 systems only)	<ul style="list-style-type: none"> • Press the Setup button on the control console and select the “Reconnect Acoustimass” menu item. Follow the onscreen instructions.

Problem	What to do
TV does not respond to remote commands (135 systems only)	<ul style="list-style-type: none"> • Make sure the speaker array is not blocking the IR sensor on the TV. Change the position of the TV and speaker array so that the IR sensor is not blocked. • For details on the location of the TV's IR sensor, refer to the owner's guide that came with your TV.
Intermittent bass (135 systems only)	<ul style="list-style-type: none"> • Check that the status indicator on the Acoustimass® module is orange and not blinking. • If the speaker array status indicator is blinking orange: <ul style="list-style-type: none"> • Check that the Acoustimass module is plugged into a live AC wall outlet and the status indicator is glowing orange. • Press the Setup button on the control console and select the "Reconnect Acoustimass" menu item. Follow the onscreen instructions. • Try moving any possible sources of wireless interference, such as a wireless computer network router, another wireless device, or a microwave oven, further away from the system.
Sound is marred by a loud hum or buzz, which may be electrical in nature	<ul style="list-style-type: none"> • Contact Bose® Customer Service to determine if and how other electrical devices in the room may be creating unwanted signals, and to obtain possible remedies.
Radio does not work (Not applicable to T20 and T10 systems.)	<ul style="list-style-type: none"> • Make sure antennas are connected properly. • Move AM antenna at least 20 inches (50 cm) from the control console and Acoustimass® module. • Adjust antenna position to improve reception. • Make sure the AM antenna is in an upright position. • Move antennas farther from control console, TV, or other electronic equipment. • Select another station. You may be in an area of weak signal coverage for some stations.
FM sound is distorted (Not applicable to T20 and T10 systems.)	<ul style="list-style-type: none"> • Adjust antenna position to reduce interference. • Fully extend the FM antenna.
Picture is blurry when viewing 3D content	<ul style="list-style-type: none"> • If your 3D glasses are of the active type, make sure they are turned on. • Try changing the 3D system option to a different setting. • If the problem persists, make sure the speaker array is not blocking the IR sensor on the TV. Change the position of the TV and speaker array so that the IR sensor is not blocked. • For details on the location of the TV's IR sensor, refer to the owner's guide that came with your TV.
Sound is distorted	<ul style="list-style-type: none"> • Make sure the audio input cable is not damaged and the connections are secure on both ends. • Reduce the volume output level from any external devices connected to the control console. • (135 systems only) Remove the protective film from the trim and grille on the speaker array and the front of the Acoustimass module.
No sound from a connected device	<ul style="list-style-type: none"> • Check the connections. • If using a coaxial or optical audio connection, make sure you have not made both types of connections to the same input on the control console. • Make sure that device is turned on. • Refer to the owner's manual that came with the device.

CARE AND MAINTENANCE

Problem	What to do
No TV picture, but audio is heard	<ul style="list-style-type: none">• Check the TV video input selection. Make sure it is correct for the video source.• Make sure video cables are securely connected.
A connected device does not respond consistently to remote commands	<ul style="list-style-type: none">• Try connecting the included external IR emitter to the control console. For guidance, press the Setup button on the control console. Select the device options and follow the onscreen instructions.
Intermittent audio dropouts heard on coaxial digital audio inputs	<ul style="list-style-type: none">• Contact Bose® Customer Service to request a composite video cable that can be used for the coaxial digital audio connection.

Resetting the system

1. Press and hold the power button on the control console for 5 seconds or until the power light on the control console changes to red.
The power light on the control console changes to red when the system shuts down.
2. Press and release the power button on the control console to restart the system. The power light changes to blinking green and then solid green when the system is on and ready to use.
3. If you still cannot operate the system using the remote, try the next procedure to pair the remote with the control console.

Pairing the remote with the console

You may need to perform this procedure if you are replacing a remote or if troubleshooting instructions recommend it.

1. Make sure your system is on. If not, press the power button on the control console.
2. Hold the remote close to the control console.
3. Press and hold both the Mute button (⏮) on the control console and the OK button on the remote at the same time for five seconds. The power light blinks when pairing is complete.
4. Press any remote button and verify that the power light on the control console blinks with each button press.

Performing a system software update

System software updates are available periodically from Bose and can be downloaded over the Internet to the USB drive included with your system.

1. Press the Setup button on the front of the control console to display the UNIFY® menu.
2. Using the remote navigation buttons, select Update.
3. Follow the instructions on the screen.

 
Note: To make sure your Bose remote is updated, hold the remote near the front of the control console while it is being updated.

Contacting customer service


For additional help in solving problems, contact Bose® Customer Service. See the address sheet included in the carton.

Replacing the batteries

Replace all four batteries when you notice a marked decrease in the range or response of your remote control, or when you see the low battery icon on the remote display (235/135 and V35/V25 systems only).

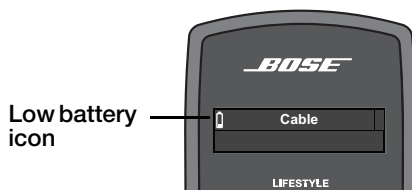

 1. Slide the battery compartment cover off the back of the remote control.
2. Remove the old batteries.
3. Install four new AA (IEC-LR6) 1.5V batteries, matching the polarity markings (+ and -) to the markings inside the battery compartment.
4. Slide the battery cover back into place.

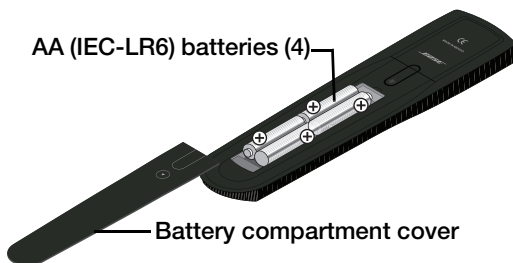

Cleaning

You can wipe the outside surfaces using a soft dry cloth. You can also lightly vacuum the speaker grilles.

- DO NOT use solvents, chemicals, or sprays.
- DO NOT allow liquids to spill or objects to drop into any openings.

Limited warranty

Your LIFESTYLE® system is covered by a limited warranty. See your product registration card for details. Please be sure to fill out the information section on the card and mail it to Bose. Failure to do so will not affect your limited warranty.

What you must do to obtain limited warranty service:

Return the product, with proof of purchase from an authorized Bose dealer, using the following procedures:

1. Contact the Bose organization in your country/region (visit <http://Global.Bose.com/> register for Bose® contact information in your country/region) for specific return and shipping instructions, including a Return Authorization Number.
2. Label and ship the product, freight prepaid, to the address provided by the Bose organization in your country.
3. Place any necessary Return Authorization Number prominently on the outside of the carton. Cartons not bearing a Return Authorization Number, where required, will be refused.

Technical information

Remote control

Frequency: 2.4 GHz

Range: 33 ft (10 m)

Control console power supply rating

AC input: 100-240V~ 50/60 Hz, 0.5A (0,5A)

DC output: 12V --- 20W Max.

Acoustimass® module rating (except for LIFESTYLE® 135 systems)

USA/Canada: 100-120V~ 50/60 Hz 350W

International: 220-240V~ 50/60 Hz 350W

Dual voltage: 100-120/220-240V~ 50/60 Hz 350W

Acoustimass® module rating (LIFESTYLE® 135 systems only)

AC input power: 100-240V~ 50/60 Hz 150W

Speaker array rating (LIFESTYLE® 135 systems only)

AC input power: 100-240V~ 50/60 Hz 60W

Wireless connection (LIFESTYLE® 135 systems only)

Output power: 5 mW @ 2400-2480 MHz

Range: 20 ft (6.1 m)

Licensing information

This product contains one or more free or open source software programs originating from third parties and distributed as part of the STLinux software package. Visit www.stlinux.com/download for further details. This free and open source software is subject to the terms of the GNU General Public License, GNU Library/Lesser General Public License, or other different and/or additional copyright licenses, notices, and disclaimers. To understand your rights under these licenses, please refer to the specific terms of the licenses, notices, and disclaimers, which are provided to you in an electronic file, named "licenses.pdf," located within the product's control console. To read this file, you will need a computer with a USB port and a software program that can view .pdf files. To download "licenses.pdf" from your product's control console:

1. Press and hold the Setup button on the front of the control console to display the System Information screen.
2. Insert a USB drive (there should be one included in your system package) into the USB input on the front of the control console.
3. Press the OK button on the remote control to copy the file to the USB drive. This download process should be completed within 30 seconds. You may then remove the USB drive.
4. To read the file "licenses.pdf," plug the USB drive into a computer with a USB port, navigate to the USB root directory, and open "licenses.pdf" with a software program that can view .pdf files.

To receive a copy of the source code for the open source software programs included in this product, please mail your written request to: Licensing Manager, Mailstop 6A2, Bose Corporation, The Mountain, Framingham, MA 01701-9168. Bose Corporation will distribute such source code to you on a disc for a charge covering the cost of performing such distribution, such as the cost of media, shipping and handling. All of the above referenced licenses, notices, and disclaimers are reproduced and available with such source code. This offer is valid for a period of three (3) years following the date of distribution of this product by Bose Corporation.



348139-0010

Made for



iPod



 
 
iPhone

BOSE[®]
Better sound through research[®]

2012 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM348139 Rev 00

LIFESTYLE® V25/V35 home entertainment systems

Made for



“Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

iPod is a trademark of Apple Inc., registered in the US and other countries.

“Made for iPod” significa que el accesorio electrónico se ha diseñado para conectarse específicamente con iPod y que el desarrollador certifica que cumple las normas de rendimiento de Apple.

 
Apple no se hace responsable del uso de este dispositivo ni de que cumpla las normas de seguridad y regulatorias.

iPod es una marcas comerciales de Apple, Inc. registradas en EE.UU. y otros países.

“Made for iPod” (Conçu pour l'iPod) signifie qu'un accessoire électronique a été conçu pour être connecté spécifiquement à un iPod et dont le fabricant certifie la conformité avec les standards de performances d'Apple.

Apple n'est pas responsable du fonctionnement de cet appareil ni de sa conformité avec les normes de sécurité.








iPod est une marques commerciales d'Apple Inc., et des marques déposées aux États-Unis et dans d'autres pays.

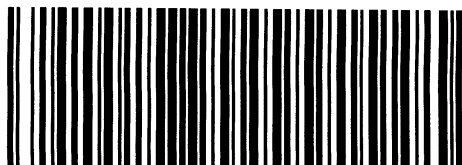

329474-0010

BOSE
Better sound through research®

       ©2010 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM329474 Rev.00

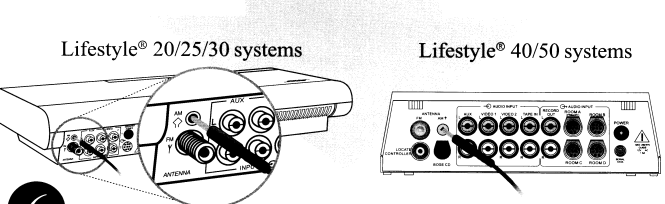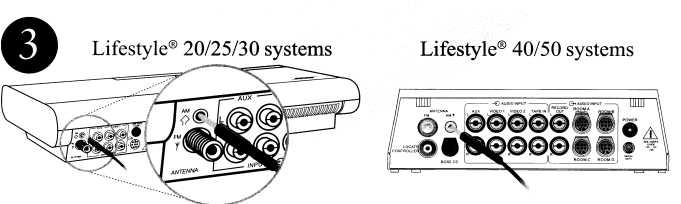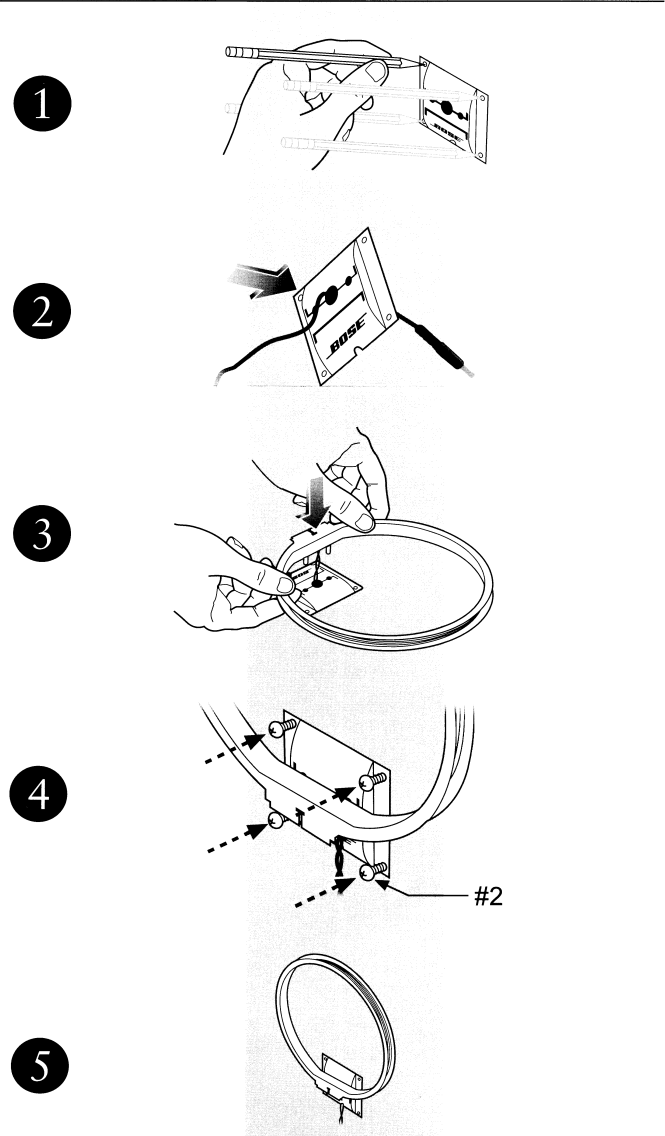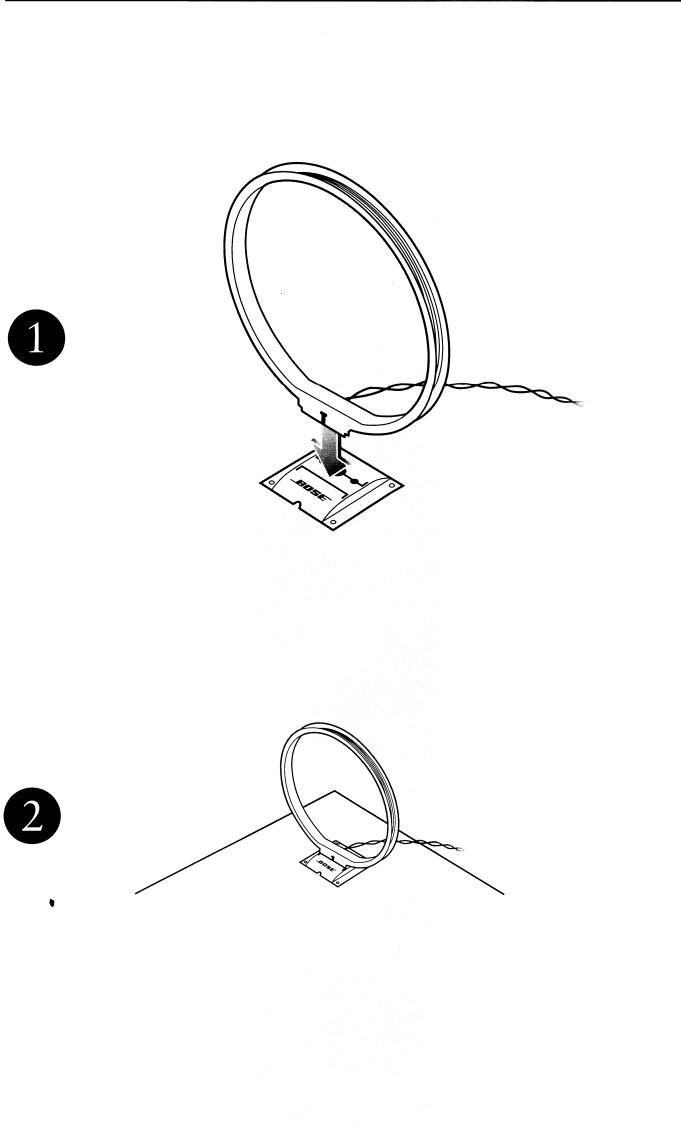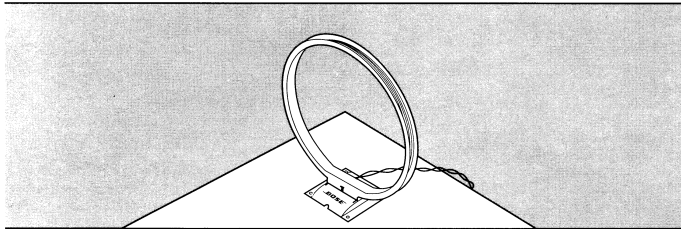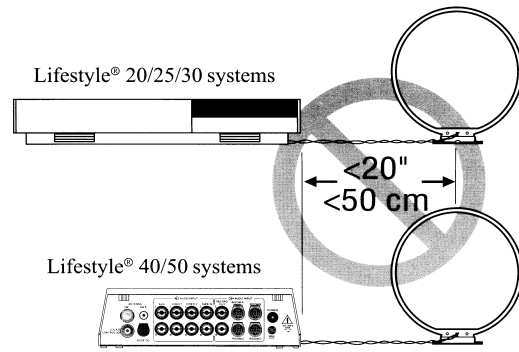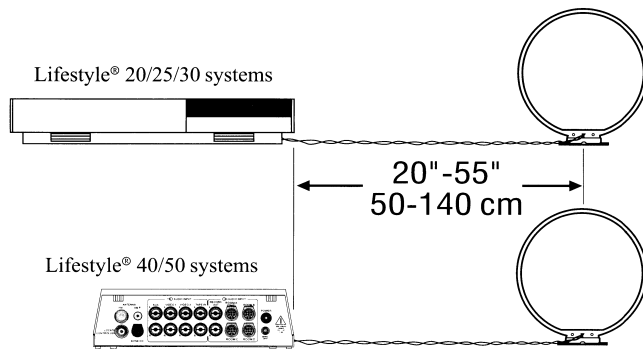



This USB flash drive is provided, should your system require updating as described in the Operating Guide. Please see Updates.Bose.com for more information.

Esta unidad flash USB se suministra por si es necesario actualizar el sistema tal como se describe en la Guía de usuario. Consulte Updates.Bose.com si desea más información.

Cette clé USB est fournie, pour le cas où il serait nécessaire de mettre à jour votre système comme décrit dans le guide d'utilisation. Consultez le site Updates.Bose.com pour plus d'informations.

Dette USB-flashdrev medfølger og kan bruges, hvis dit system kræver opdatering som beskrevet i betjeningsvejledningen. Du kan finde flere oplysninger på Updates.Bose.com.

Dieses USB-Flash-Laufwerk wird für die Aktualisierung Ihres System wie in der Bedienungsanleitung beschrieben mitgeliefert. Weitere Informationen finden Sie unter Updates.Bose.com.

Questa unità USB flash viene fornita per essere utilizzata qualora fosse necessario aggiornare il sistema così come descritto nel Manuale d'uso. Per ulteriori informazioni, visitare Updates.Bose.com.

Deze USB-stick wordt meegeleverd voor het geval er een update van het systeem nodig is zoals beschreven in de bedieningshandleiding. Raadpleeg Updates.Bose.com voor meer informatie.

Använd den medföljande USB-enheten om systemet kräver uppdatering enligt beskrivning i användarhandboken. Mer information finns i Updates.Bose.com.



Ta pamięć USB flash jest dostarczona na wypadek, gdyby system wymagał aktualizacji zgodnie z opisem w Instrukcji obsługi. Więcej informacji można znaleźć pod adresem Updates.Bose.com.

Järjestelmän mukana toimitetaan USB-muistikku siltä varalta, että järjestelmä on päivitettävä käyttöohjeessa kuvatulla tavalla. Lisätietoja on osoitteessa Updates.Bose.com.

Ezt az USB flash meghajtót a készülékhez mellékeljük arra az esetre, ha a rendszert a Használati útmutatóban leírtak szerint frissíteni szeretné. További információért látogasson el az Updates.Bose.com webhelyre.

แฟลชไดรฟ์ USB นี้จัดส่งไว้ให้สำหรับกรณีที่ต้องอัปเดตระบบของคุณ ตามที่ระบุไว้ในคู่มือการใช้งาน โปรดดูที่ Updates.Bose.com สำหรับข้อมูลเพิ่มเติม

제공하는 USB 플래시 드라이브는 조작 안내서의 설명에 따라 시스템 업데이트시 필요합니다. 자세한 정보는 Updates.Bose.com을 참조하십시오.

当您的系统需要按操作指南中的说明进行更新时，可使用此 U 盘进行更新。更多信息，请参阅 Updates.Bose.com。

當您的系統需要按操作指南中的說明進行更新時，可使用此 U 盤進行更新。更多資訊，請參閱 Updates.Bose.com。

يتم توفير محرك فلاش USB هذا إذا تطلب النظام تحديثًا كما هو مبين في دليل التشغيل. يرجى زيارة موقع Updates.Bose.com لمزيد من المعلومات.

このUSBフラッシュドライブは、操作ガイドに記載されたシステムアップデートが必要となった場合のために付属しています。詳細については、Updates.Bose.comを参照してください。



Important Safety Instructions

1. **Read these instructions** – for all components before using this product.
2. **Keep these instructions** – for future reference.
3. **Heed all warnings** – on the product and in the owner's guide.
4. **Follow all instructions.**
5. **Do not use this apparatus near water** – Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture are present.
6. **Clean only with dry cloth** – and as directed by Bose® Corporation. Unplug this product from the wall outlet before cleaning.
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions** – To ensure reliable operation of the product and to protect it from overheating, put the product in a position and location that will not interfere with its proper ventilation. For example, do not place the product on a bed, sofa, or similar surface that may block the ventilation openings. Do not put it in a built-in system, such as a book-case or a cabinet that may keep air from flowing through its ventilation openings.
8. **Do not install near any heat sources, such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.**
9. **Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.**
10. **Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
11. **Only use attachments/accessories specified by the manufacturer.**
12. **Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**
13. **Unplug this apparatus during lightning storms or when unused for long periods of time** – to prevent damage to this product.
14. **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as power-supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped** – Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please call Bose to be referred to an authorized service center near you.
15. **To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.**
16. **Do not let objects or liquids enter the product** – as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
17. **See product enclosure for safety related markings.**



Information about products that generate electrical noise

If applicable, this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
Note: Unauthorized modification of the receiver or radio remote control could void the user's authority to operate this equipment.

This product complies with the Canadian ICES-003 Class B specifications.

- 18. Use proper power sources** – Plug the product into a proper power source, as described in the operating instructions or as marked on the product.
- 19. Avoid power lines** – Use extreme care when installing an outside antenna system to keep from touching power lines or circuits, as contact with them may be fatal. Do not install external antennas near overhead power lines or other electric light or power circuits, nor where an antenna can fall into such circuits or power lines.
- 20. Ground all outdoor antennas** – If an external antenna or cable system is connected to this product, be sure the antenna or cable system is grounded. This will provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code ANSI/NFPA No. 70 provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the ground electrode. Refer to the antenna grounding illustration on this page.

Antenna grounding

Example of antenna grounding as per National Electrical Code, ANSI/NFPA 70.

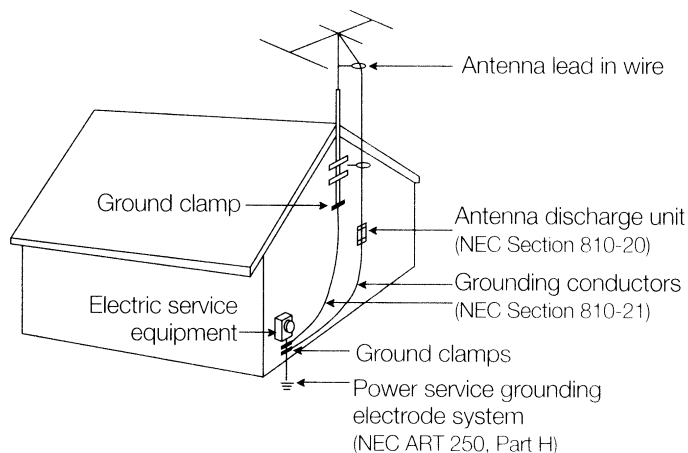

Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC (of USA) that provides guidelines for proper grounding. In particular, it specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as is practical.



255805

BOSE
Better sound through research®

©2007 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
255805 AM Rev.03

USA

Bose Corporation, The Mountain
Framingham, MA 01701-9168
1-800-901-0195
Phone hours - ET (Eastern Time):
Weekdays 8:30 a.m. to 8 p.m.
Saturdays 9 a.m. to 3 p.m.
owners.Bose.com

Canada

Bose Ltd., 1-35 East Beaver Creek Road
Richmond Hill, Ontario L4B 1B3
1-800-465-2673
Phone hours - ET (Eastern Time):
Weekdays 9 a.m. to 5 p.m.
www.Bose.ca

Australia

Bose Pty Limited, Unit 3/2 Holker Street
Newington NSW 2127
TEL 612 8737 9999 FAX 612 8737 9924

Belgique/België

Bose N.V., Limesweg 2
B-3700 Tongeren
TEL 012-390800 FAX 012-390840

China

Bose Electronics (Shanghai) Ltd
2203-2305 22F, West Gate Tower
1038 West Nanjing Road
MeiLongzhen Plaza
Shanghai 200041
Peoples Republic of China
TEL 86-22-62713000 ext 162
FAX 86-21-62713008

Danmark

Bose A/S, Industrivej 7
2605 Brøndby
TEL 04343-7777 FAX 04343-7818

Deutschland

Bose GmbH, Max-Planck-Straße 36d
D-61381 Friedrichsdorf
TEL 06172-71040 FAX 06172-710419
www.Bose.de

France

Bose S.A.S.
12 rue de Témara
78100 Saint Germain en Laye
TEL 01 30 61 63 63 FAX 01 30 61 63 88
www.Bosefrance.fr

India

Bose Corporation India Private Limited
4th Floor,
Shriram Bhartiya Kala Kendra,
1 Copernicus Marg
New Delhi, India 100 001
TEL +91 11 2307 3825 / 3826 / 3827
FAX +91 11 2307 3823

Ireland

Bose GP
Castleblayney Road
Carrickmacross, Co Monaghan
TEL (042) 9671500 FAX (042) 9671501
www.Bose.ie

Italia

Bose S.p.A., Via della Magliana 876
00148 Roma
TEL 06 60 292 292 FAX 06 60 292 119
www.Bose.it

Japan

Bose K.K.
Shibuya YT Building
28-3 Maruyama-cho
Shibuya-ku, Tokyo 150-0044
TEL +81-3-5489-0955 FAX +81-3-5489-1041
www.Bose.co.jp

Mexico

Bose de Mexico S. de R.L. de C.V.
Paseo de las Palmas # 405
Despacho 204
Lomas de Chapultepec
C.P. 11000, Mexico D.F., Mexico
TEL +52 (55) 52 02 35 45
TEL +52 (55) 52 02 41 95
FAX +52 (55) 52 02 37 28

Nederland

Bose B.V., Nijverheidstraat 8
1135 GE Edam
TEL 0299-390111 FAX 0299-390109
consumenteninfo@Bose.com
www.Bose.nl

Norge

Bose A/S, Lerkeveien 58
2209 Kongsvinger
TEL 62 82 15 60 FAX 62 82 15 69

Österreich

Bose Ges.m.b.H., Vienna Business Park
Wienerbergstrasse 7 (10.OG)
A-1100 Vienna
TEL 01-60404340 FAX 01-604043423
www.Bose.at

Schweiz

Bose AG, Hauptstrasse 134
4450 Sissach
TEL 061-9757733 FAX 061-9757744
www.Bose.ch

Sverige

Bose A/S, Johannefredsgatan 4
S-43153 Mölndal
TEL 031-878850 FAX 031-274891

United Kingdom

Bose Limited
1 Ambley Green
Gillingham Business Park
Gillingham, Kent ME8 0NJ
TEL 0870-741-4500 FAX 0870-741-4545
www.Bose.co.uk

World Wide Web

www.Bose.com
www.Boseeurope.com
owners.Bose.com



328733-0010

BOSE®
Better sound through research®

OUR COMMITMENT TO YOU

We take great pride in designing each of our products with the goal of providing the highest accuracy musical performance possible in the price range of that product. We strive to reproduce the musical sounds as closely as possible to those of the original performance. And we strive to avoid flashy sounds such as those associated with accentuated bass and/or treble frequencies. While those sounds may be initially attractive to the novice, they are not real and are not enduring. In addition, we use only the highest quality parts and the latest assembly and quality control techniques to ensure the reliability and long life of our products.

Our reputation rests on our steadfast pursuit of this policy in sound systems for the home, the automobile, and businesses.

At Bose® we reinvest 100% of our earnings back into the company. This enables us to support research that continually gives rise to new technologies for improving sound reproduction.

When you purchase any product from Bose, we encourage you to compare it, as we do, to competitive products for musical accuracy. We believe that this process will enhance your appreciation of the product you select.

With best wishes from all of us at Bose for many years of enjoyable listening.



Warranty information inside
Register your product now

Contiene información sobre la garantía
Registre su producto ahora

Renseignements sur la garantie à l'intérieur
Enregistrez votre produit dès maintenant



Serial number:

Número de serie:

Numéro de série :



Registre su producto.* Conozca toda la gama de servicios que su garantía le ofrece.

Registrarse en línea es fácil y rápido.
Global.Bose.com/register

Enlace directo para registrarse:

www.register.Bose.eu (Europa)
www.Bose.com/register (EE.UU., Puerto Rico
e Islas Vírgenes de EE.UU.)

www.Bose.com.au/warranty (Australia)
www.Bose.ca/register (Canadá)
www.Bose.co.nz/warranty (Nueva Zelanda)

Envíe cualquier correspondencia en relación con información de productos o los servicios de la Garantía limitada a la sede corporativa de la empresa en:

Registro del producto
Bose Corporation
The Mountain
PO Box 9168
Framingham, MA 01701-9168 EE.UU.

1-800-736-5076 (EE.UU.)
1-508-766-1000 (INTL) *Es posible que se apliquen cargos por la llamada. Tenga a mano el número de serie cuando realice la llamada.*

Los propietarios que vivan fuera de los Estados Unidos deben revisar la Guía del usuario o ir a Global.Bose.com para encontrar la dirección más cercana.

GARANTÍA LIMITADA

A quién cubre:
Esta garantía se extiende únicamente al comprador final original o a la persona que reciba el producto como regalo y no se extenderá a cualquier otra persona o beneficiario.

Qué se cubre/Por cuánto tiempo:
A menos que un período de garantía diferente se especifique en la Guía del usuario provista con su producto Bose, por un período de 1 año (2 años en la UE.) [5 años para altavoces no eléctricos incorporados en el producto] a partir de la fecha de la compra minorista por parte del usuario final original, Bose garantiza que este producto, cuando se le entrega en su paquete original y en nueva condición, por parte de un revendedor autorizado por Bose y es utilizado en condiciones normales, no tiene defectos de fabricación, de materiales ni de producción.

Qué es lo que no se cubre:
Esta garantía no cubre defectos ocasionados por prácticas de uso o mantenimiento incorrectas o no razonables, el incumplimiento de las instrucciones de uso; accidentes; humedad excesiva; insectos; rayos; subidas de tensión; conexión a voltaje incorrecto; alteraciones o modificaciones no autorizadas del producto original; daños causados por embalaje o proceso de envío inapropiado; pérdida, daño o alteración de la información guardada; daños ocasionados por el uso con productos que no sean de Bose; productos que requieren de modificación o adaptación para permitir que se utilicen en cualquier país fuera del país para el que fueron diseñados,

fabricados, aprobados y/o autorizados, o reparación de productos dañados por estas modificaciones; y productos adquiridos de vendedores no autorizados.

Qué haremos:
Durante el periodo de garantía repararemos o sustituiremos, a nuestra discreción, las partes defectuosas en un periodo razonable de tiempo y sin cargo utilizando repuestos nuevos o rehabilitados.

Qué es lo que no haremos:
Pagar cargos por envío, seguros o transporte del producto de usted a nosotros, tasas de importación o impuestos.

Qué debe hacer para obtener el servicio de la Garantía limitada:
Devuelva el producto con el comprobante de compra emitido por un vendedor autorizado de Bose, realizando los siguientes pasos:

1. Contáctese con la compañía Bose en su país/ región (visite Global.Bose.com para obtener información de contacto en su país/región) a fin de obtener instrucciones específicas sobre devolución y envío;
2. Rotule y envíe el producto, con flete pago, a la dirección de la compañía Bose en su país; y
3. Coloque cualquier número de autorización para la devolución que sea necesario en forma visible y en la parte exterior del paquete. Los paquetes que no tengan un número de autorización de devolución, cuando sea necesario, serán rechazados.

Otras condiciones:
LAS DISPOSICIONES DE ESTA GARANTÍA LIMITADA REEMPLAZAN CUALQUIER OTRA GARANTÍA, YA SEA EXPRESA O IMPLÍCITA, ESCRITA U ORAL, INCLUYENDO CUALQUIER GARANTÍA DE COMERCIABILIDAD O ADECUACIÓN A UN FIN PARTICULAR. LA RESPONSABILIDAD MÁXIMA DE BOSE CORPORATION NO PUEDE EXCEDER EL PRECIO DE COMPRA REAL QUE USTED PAGÓ POR EL PRODUCTO. BAJO NINGUNA CIRCUNSTANCIA SERÁ BOSE RESPONSABLE POR LA PÉRDIDA, DAÑO O ALTERACIÓN DE INFORMACIÓN GUARDADA O POR DAÑOS ESPECIALES, INCIDENTALES, EN CONSECUENCIA O INDIRECTOS CUALQUIERA SEA LA CAUSA DE LOS MISMOS, INCLUYENDO SIN LIMITACIÓN, EL REEMPLAZO DE EQUIPOS Y PROPIEDADES Y CUALQUIER COSTO DE RECUPERACIÓN, PROGRAMACIÓN O REPRODUCCIÓN DE CUALQUIER PROGRAMA O INFORMACIÓN GUARDADA O UTILIZADA CON SU PRODUCTO BOSE. Esta garantía se anula en caso de que la etiqueta con el número de serie haya sido quitada o dañada.

Otros derechos legales:
Esta garantía limitada le otorga derechos legales específicos y es posible que también se le otorguen otros derechos que varían según los estados o países. Algunos lugares no permiten limitaciones en garantías implícitas o la exclusión o limitación por daños secundarios o resultantes, por lo que es posible que las limitaciones o exclusiones anteriores no se apliquen a usted.

Enregistrez votre produit.* Renseignez-vous sur la gamme complète de services offerts dans le cadre de notre garantie.

L'enregistrement en ligne est simple et rapide.
Global.Bose.com/register

Liens directs vers les sites d'enregistrement :

www.register.Bose.eu (Europe)
www.Bose.com/register (États-Unis, Puerto Rico
et Îles Vierges des États-Unis)

www.Bose.com.au/warranty (Australie)
www.Bose.ca/register (Canada)
www.Bose.co.nz/warranty (Nouvelle-Zélande)

Pour toute correspondance relevant d'une demande de renseignements au sujet de nos produits ou de nos services de garantie limitée, veuillez nous écrire à notre siège social, à l'adresse suivante :

Enregistrement de produits
Bose Corporation
The Mountain
PO Box 9168
Framingham, MA 01701-9168 États-Unis

1-800-736-5076 (États-Unis)
1-508-766-1000 (international) *Des frais peuvent s'appliquer. Veuillez avoir en main votre numéro de série lors de l'appel.*

Si vous résidez hors des États-Unis, consultez le guide de l'utilisateur ou le Global.Bose.com pour obtenir l'adresse postale la plus proche.

GARANTIE LIMITÉE

Bénéficiaire :
La présente garantie est uniquement valable pour le premier acheteur ou la personne ayant reçu le produit en cadeau et ne peut en aucun cas être étendue ou transférée à une autre personne.

Objet et durée de la garantie :
À moins qu'une durée différente ne soit indiquée dans le guide de l'utilisateur fourni avec le produit, Bose garantit pendant une période d'un an (deux ans dans l'UE) [cinq ans pour tout haut-parleur non amplifié intégré au produit], à partir de la date d'achat au détail par le premier acheteur, que le produit est libre de tout vice de matériaux et de fabrication lorsqu'il est livré à l'état neuf, dans son emballage d'origine et par un détaillant autorisé Bose, et qu'il est utilisé dans des conditions normales.

Exclusions :
La présente garantie ne couvre pas : les défauts ou dommages résultant d'une utilisation ou d'un entretien inapproprié ou incorrect, du non-respect des directives d'utilisation, d'un accident, d'une humidité excessive, de la présence d'insectes, de la foudre, d'une pointe de courant électrique, d'un raccordement à un courant électrique d'une tension incorrecte, d'une altération ou d'une modification du produit, de procédures d'emballage ou d'expédition inappropriées; la perte, l'altération ou la détérioration de données informatiques; les dommages causés par l'utilisation avec un produit d'une marque autre que Bose; les modifications ou adaptations effectuées au produit pour qu'il soit utilisable dans un pays autre que celui pour lequel il a été conçu, fabriqué,

approuvé et/ou autorisé, de même que la réparation d'un produit endommagé par ces modifications; les produits achetés auprès d'un détaillant non agréé.

Notre engagement :
Au cours de la période de garantie, à notre seule discrétion, nous réparerons ou remplacerons toute pièce défectueuse dans un délai raisonnable, sans frais utilisant nouvel ou renoué les parties de remplacement.

Frais exclus :
La garantie ne couvre pas le paiement des frais d'expédition, d'assurance et de transport du produit vers notre adresse, ainsi que de toutes taxes et de tous droits d'importation ou autres.

Conditions de l'obtention des services de garantie limitée réparation :
Expédiez-nous le produit, accompagné de la preuve d'achat d'origine d'un détaillant Bose autorisé, en suivant les directives ci-dessous :

1. Communiquez avec l'entité Bose de votre pays ou région (consultez le site Global.Bose.com pour connaître les coordonnées de Bose dans votre pays ou région) pour obtenir les instructions de retour et d'expédition particulières;
2. Étiquetez et expédiez le produit, en port payé, à l'adresse fournie par l'entité Bose de votre pays ou région; et
3. Inscrivez de façon très visible sur l'extérieur de l'emballage tout numéro d'autorisation de retour nécessaire. Un envoi qui ne comporte pas de numéro d'autorisation de retour lorsque celui-ci est requis sera refusé.

Autres conditions :
LES CONDITIONS DE LA PRÉSENTE GARANTIE LIMITÉE REMPLACENT TOUTE AUTRE GARANTIE, EXPRESSE OU IMPLICITE, EXPRIMÉE PAR ÉCRIT OU ORALEMENT, Y COMPRIS TOUTE GARANTIE DE QUALITÉ MARCHANDE OU D'ADAPTATION À UN USAGE PARTICULIER. LA RESPONSABILITÉ MAXIMALE DE BOSE CORPORATION ÉQUIVAUT AU PRIX PAYÉ PAR LE CONSOMMATEUR À L'ACHAT DU PRODUIT. BOSE NE PEUT EN AUCUN CAS ÊTRE TENUE RESPONSABLE DE LA PERTE, DE L'ALTÉRATION OU DE LA DÉTÉRIORATION DE DONNÉES INFORMATIQUES, NI DE DOMMAGES PARTICULIERS, ACCESSOIRES OU INDIRECTS, QUELLE QU'EN SOIT LA CAUSE, Y COMPRIS, SANS RESTRICTION, LE REMPLACEMENT D'ÉQUIPEMENT ET DE BIENS ET TOUTS FRAIS DE RÉCUPÉRATION, DE PROGRAMMATION OU DE REPRODUCTION DE TOUT PROGRAMME OU DE TOUTES DONNÉES ENREGISTRÉES DANS LE PRODUIT BOSE OU UTILISÉS AVEC CELUI-CI. La présente garantie est annulée si l'étiquette portant le numéro de série est retirée ou altérée.

Autres droits :
La présente garantie limitée vous confère des droits particuliers selon la loi; vous pouvez aussi bénéficier d'autres droits qui varient selon votre pays ou région de résidence. Certains territoires ne permettant pas la limitation des garanties implicites ou l'exclusion ou la limitation des dommages indirects ou accessoires, il est donc possible que les limites ou exclusions ci-dessus ne s'appliquent pas à vous.

*En caso de que no registre su producto no se verán afectados sus derechos de garantía limitada.

*Le non-enregistrement du produit n'affecte aucunement vos droits en vertu de la garantie limitée.

Register your product.* Learn about the full range of services your warranty provides.

Registering online is quick and easy!
Global.Bose.com/register

To link directly to registration:

www.register.Bose.eu (Europe)

www.Bose.com/register (US, PR & USVI)

www.Bose.com.au/warranty (Australia)

www.Bose.ca/register (Canada)

www.Bose.co.nz/warranty (New Zealand)

Send any correspondence regarding product information or Limited Warranty services to our corporate headquarters at:

Product Registration

Bose Corporation

The Mountain

PO Box 9168

Framingham, MA 01701-9168 USA

1-800-736-5076 (US)

1-508-766-1000 (INTL) *Charges may apply.*

Please have your serial number available when you call.

Owners living outside the United States should check the Owner's Guide or Global.Bose.com for the nearest mailing address.

LIMITED WARRANTY

Who is covered:

This warranty is extended only to the original end-use purchaser or the person receiving the product as a gift, and shall not be extended to any other person or transferee.

What is covered/For how long:

Unless a different warranty period is stated in the Owner's Guide provided with your Bose® product, for a period of 1 year (2 years EU) [5 years for any non-powered speakers that may be incorporated into this product] from the date of retail purchase by the original end-use purchaser, Bose warrants that this product, when delivered to you in new condition, in original packaging, from a Bose authorized reseller and used in normal conditions, is free from any defects in manufacturing, materials and workmanship.

What is not covered:

This warranty does not cover defects resulting from improper or unreasonable use or maintenance; failure to follow operating instructions; accident; excess moisture; insects; lightning; power surges; connections to improper voltage supply; unauthorized alteration or modification of original condition; damages caused by inadequate packing or shipping procedures; loss of, damage to or corruption of stored data; damages caused by use with non-Bose products; product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed,

manufactured, approved and/or authorized, or repair of products damaged by these modifications; and products purchased from unauthorized dealers.

What we will do:

During the warranty period, we will, at our sole option, repair or replace (using new or refurbished replacement parts) any defective parts within a reasonable period of time and free of charge.

What we will not do:

Pay shipping, insurance or transportation charges from you to us, or any import fees, duties and taxes.

What you must do to obtain Limited Warranty

Service:

Return product, with proof of purchase from an authorized Bose dealer, using the following procedures:

1. Contact the Bose organization in your country/region (visit Global.Bose.com for Bose contact information in your country/region) for specific return and shipping instructions;
2. Label and ship the product, freight prepaid, to the address provided by the Bose organization in your country; and
3. Place any necessary return authorization number prominently on the outside of the carton. Cartons not bearing a return authorization number, where required, will be refused.

Other conditions:

THE PROVISIONS OF THIS LIMITED WARRANTY ARE IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESSED OR IMPLIED, WRITTEN OR ORAL, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. BOSE CORPORATION'S MAXIMUM LIABILITY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID BY YOU FOR THE PRODUCT. IN NO EVENT SHALL BOSE BE LIABLE FOR LOSS OF, DAMAGE TO OR CORRUPTION OF STORED DATA, OR FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR INDIRECT DAMAGES HOWSOEVER CAUSED INCLUDING WITHOUT LIMITATION THE REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, PROGRAMMING OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH YOUR BOSE PRODUCT. This warranty is void if the label bearing the serial number has been removed or defaced.

Other legal rights:

This limited warranty gives you specific legal rights, and you also may have other rights that vary from state to state or country to country. Some places do not allow limitations on implied warranties or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

**Failure to register your product will not affect your limited warranty rights.*